

TERRAIN DX4 s

ALWAYS IN SHAPE
SMALL & COMPACT

USER
MANUAL AND
WARRANTY



CORVUS



CORVUS OFF-ROAD VEHICLES® We reserve all commercial rights and/or the right to exploit the brand. As CORVUS is constantly seeking new ways to improve the specifications, design and quality of its utility vehicles, ongoing modifications may take place. That is why the information in this catalogue may have changed since the time of printing. CORVUS reserves the right to modify models, colours, and/or technical specifications without notice and without incurring any obligation. Drivers of CORVUS vehicles must comply with all requirements demanded by current legislation in relation to driving licenses and security measures required for the proper use of such vehicles. NEVER perform trick manoeuvres and avoid excessive speeds and sharp turns. Never drive under the influence of alcohol or drugs.

CONTENT

User manual	4
General information	5
1. Introduction	6
2. Legal notices	6
3. Cautions and warnings	6
4. Preliminary warnings	7
5. Vehicle identification	9
6. Exterior components	10
7. Driving seat	11
8. Components	12
Keys	12
Light switch	13
Windshield wiper / washer button	13
Instrument panel	14
Gearshift lever	14
2WD / 4WD driveline switch	15
Rear differential lock switch	15
Heating system	16
Parking brake	17
Fuel tank cap	17
Rear-view mirrors	18
Safety belts	18
Steering wheel adjustment	19
Seats	20
Hood	21
Cargo box	22
Tilting the cargo box	23
Unloading the box	24
Trailer	25
9. Specifications	26
10. Multifunction panel	27
Usage Information	32
11. Driving-in stage	33
12. Daily inspection before driving	33
13. Start-up procedure	37
14. Use of the rear differential lock	38
15. Use of the 2WD / 4WD driveline	39
16. Driving tips	39
General information	39
Precautions when turning	39
Driving on slopes or hills	40
Driving through water	40
Reverse gear	41
Unfamiliar terrain	41
Driving with a load	41
17. Cleaning	43
18. Storage	43
Maintenance	44
19. Safety and maintenance standards	45
20. Service chart	46
21. Raising the vehicle	48
22. Underbody protector	49
23. Wheels	49
24. Air filter	50
25. Engine oil	51
26. Front differential oil	55
27. 4WD locking oil	57
28. Grease nipples	55
29. Lighting	58
30. Front lamps	60
31. Rear lamps	61
32. Tyres	61
33. Bolts, nuts and fastenings	62
34. Brake wear	62
35. Brake fluid	62
36. Coolant	63
37. Radiator hose	64
38. Auxiliary battery	64
39. Fuses	65
40. Auxiliary power outputs	66
41. Windshield wiper	67
Product liability	68
Warranty manual	70
Revision control	78

USER MANUAL

GENERAL INFORMATION

* Equipment available depending on version.
We reserve the right to modify the product and the design.

I. INTRODUCTION

We are delighted to be able to congratulate you on the purchase of your **CORVUS** vehicle and we would like to thank you for the confidence you have placed in us.

You are now the owner of a modern multi-purpose work vehicle that you will enjoy a lot if you care for it and maintain it adequately. Before you start it up for the first time, please read the instructions of use carefully to become familiar with the handling and the characteristics of your vehicle. Only in this way will you be able to understand how to best adapt your vehicle to your requirements and how to avoid accidents. For your safety we recommend that you only use spare parts and accessories authorised by **CORVUS**.

If you use any other products, **CORVUS** declines all liability for any damages that may arise from so doing. We recommend you follow the instructions on the driving-in period and maintenance intervals in order to prolong the life of your vehicle. For maintenance work, you should always consult an official **CORVUS** distributor or dealer.

Driving in the countryside is fascinating and we hope you will enjoy it to the full. Although **CORVUS** vehicles are environmentally friendly, environmental problems and conflict with other people may ensue in the countryside. Handling the vehicle in a responsible way ensures that these problems and conflicts do not arise. Be sure to use the vehicle within the bounds of the law, show that you are environmentally aware and respect the rights of others.

2. LEGAL NOTICES

In the interest of technical development, **CORVUS INNOVA S.L.** reserves the right to modify the construction, equipment and accessories of its vehicles without notice. Size, weight and power data should be understood with the respective tolerances. Depending on the volume of your **CORVUS** equipment and accessories, and on the versions that are approved in compliance with the different laws of each State, there may be variations with regard to descriptions and illustrations. The photographs in this manual may not therefore correspond to the model you have purchased. For this reason, no liability can be derived from any error, printing error or omission.

In the event of any discrepancy or questions about the contents of this manual, we recommend that you contact our After-sales Service.

3. CAUTIONS AND WARNINGS

YOU SHOULD READ THIS MANUAL CAREFULLY AND COMPLETELY BEFORE YOU ENJOY USING IT FOR THE FIRST TIME. IT CONTAINS INFORMATION AND SUGGESTIONS THAT WILL FACILITATE THE USE AND HANDLING OF THE VEHICLE. PAY PARTICULAR ATTENTION TO THE FOLLOWING WARNINGS THAT CAN BE FOUND IN THE MANUAL:



WARNING. A warning concerning a hazard that can cause damage to the vehicle.



DANGER. A warning concerning a hazard that can lead to personal and/or serious injury and even death.

#ExploringYourWorld

We reserve the right to modify the product and the design.

4. PRELIMINARY WARNINGS

WARNING

Take proper precautions while driving, especially in turning manoeuvres; driving on slopes or in areas with obstacles can cause a collision or make the vehicle overturn.

Only people who have a driving license should drive this vehicle. It is advisable that the driver and their companion should use a helmet and goggles when using the vehicle. Do not cause the vehicle to jump or flip, be aware of changes in the terrain on which you are going to drive.

Check the possible obstacles that you want to clear, do not attempt to clear major obstacles, such as fallen trees, rocks, slopes, muddy areas, etc.

Take care in slippery areas, drive at low speed, watch out for any possible loss of grip, do not tackle steep slopes.

Corvus recommends that all drivers of the DX4s receive off-road driving training before they drive this vehicle for the first time.

ELECTROMAGNETIC INTERFERENCE

This vehicle emits a low level of electromagnetic energy. Persons with active or non-active implantable medical devices (such as heart monitoring devices) should check the restrictions for their device and the electromagnetic standards and regulations applicable to this vehicle.

DANGER

You should not use the vehicle in a way that is not in line with the criteria and instructions contained in this manual or in a way that may cause damage to persons or things.

These are some examples of unsafe use and misuse:

- Driving with more than two people in the vehicle.
- Not keeping the entire body inside the cabin.
- Transporting people in the cargo box.
- Transporting children who require child safety seats or booster seats. The vehicle is not designed to hold child safety seats.
- Not complying with the instructions for use and maintenance set forth in this manual.
- Exceeding the cargo and towing limits.
- Driving on unstable or not consolidated ground.
- Driving on terrain with an inclination of more than 15%.
- Driving in flooded areas (maximum temporary fording depth is 40 cm).
- Driving in sites where logging is performed and there may be a risk of falling objects. This vehicle does not have a falling object protective structure (FOPS).
- Using the vehicle for crop spraying applications. This vehicle does not provide protection against substances that are harmful to health. Always use personal protective equipment if you decide to use this vehicle for crop spraying or other applications that require the use of hazardous substances.
- Using accessories, parts or equipment that are not authorised by CORVUS.

Adapt the speed of the vehicle to the terrain. When driving downhill, use the short LOW gear and keep the speed as low as possible, gently applying the brakes without locking the wheels. Under no circumstances should you perform manoeuvres with a slope / elevation or lowering greater than 15%.

If you need to tow your vehicle, make sure the towing vehicle has sufficient drag and braking capacity, use a tow bar or a sufficiently long cable and do not go any faster than 10 km/hr.

All technical and mechanical repairs must be carried out by an authorised **CORVUS** garage.

Do not use the vehicle or leave the engine running in enclosed areas if they are not properly ventilated; the concentration of exhaust gas can cause death.

 **DANGER**

The exhaust pipe and other elements reach high temperatures during use and take time to cool down after you turn off the engine. Avoid handling or touching anything during this period.

 **DANGER**

Avoid using loose clothing that could get caught up with parts of the vehicle or the environment. Although total security is impossible, the use of adequate equipment reduces the likelihood and/or severity of injuries.

5. VEHICLE IDENTIFICATION (CHASSIS - ENGINE)

Your **CORVUS TERRAIN** has an identification plate which details: manufacturer, type approval, VIN, mass of the vehicle, maximum mass per axle (A1-A2) and towable mass (depending on type of braking and towing).

The **vehicle identification number** is also stamped on the rear right-hand side of the chassis:




* Variable depending on version and model.




The **vehicle identification number** is also stamped on the rear right-hand side of the chassis:



6. EXTERIOR COMPONENTS

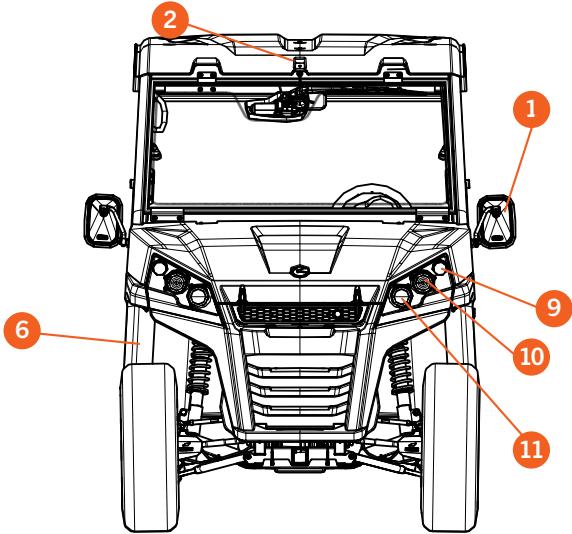


- 1. Rear-view mirrors
- 2. Windshield wiper *
- 3. Cargo box
- 4. Driving seat
- 5. Front hood
- 6. Fuel tank
- 7. Engine/CVT air intake

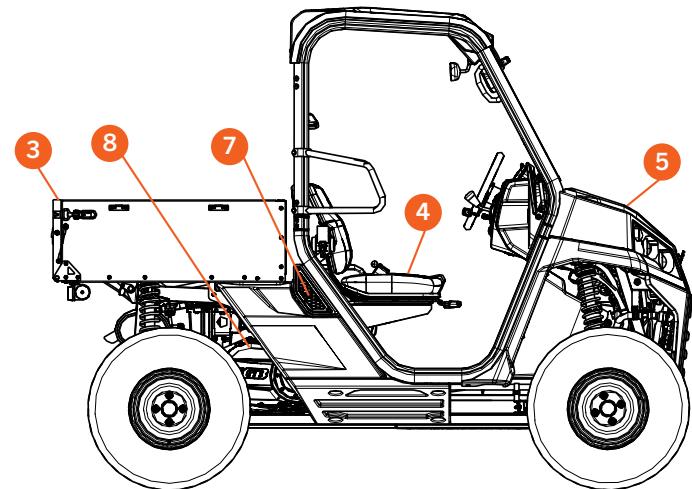

- 8. Engine and gearbox
- 9. Steering indicators
- 10. High beam
- 11. Low beam (short)

7. DRIVING SEAT

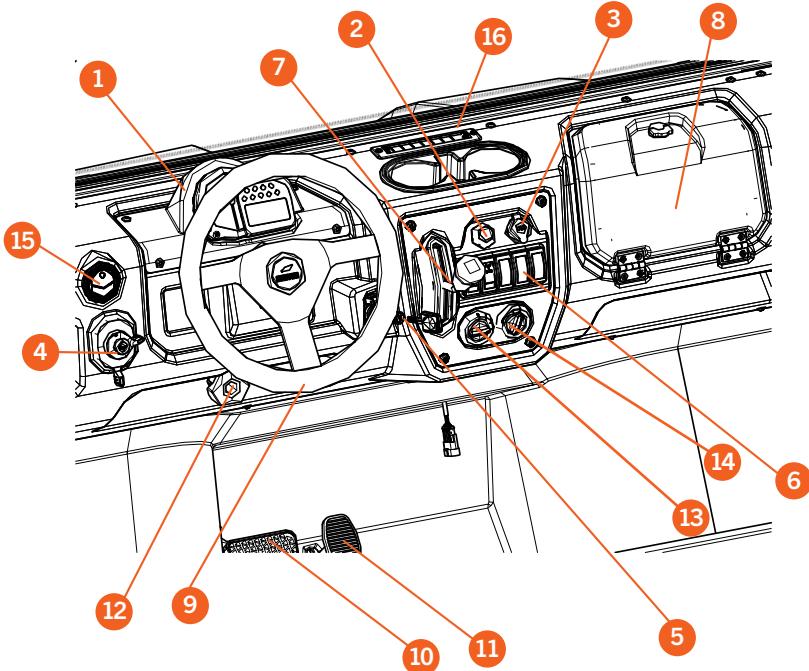

1. Instrument panel.
2. Emergency signal button.
3. 12V accessories socket.
4. Lights control, steering indicators and horn.
5. Key start-up.
6. Instrument panel button panel.
7. Gear lever.
8. Glove box.
9. Steering wheel.
10. Brake pedal.
11. Accelerator pedal.
12. Steering wheel adjustment.
13. Air outflow selector. *
14. Output air temperature selector. *
15. Adjustable and sealable air vents. *
16. Top air diffuser. *

8. LOCATION OF COMPONENTS

IGNITION KEY (1)

The lock is located to the right of the steering wheel and has three positions:

- Off
- Ignition
- Start-up



FUEL CAP KEY (2)


The fuel cap is located on the centre of the rear left-hand side of the vehicle.

8. LOCATION OF COMPONENTS

LIGHT SWITCH

Located to the left of the steering wheel, with the following functions:

- **Indicator lamps (1):** Move the lever to the right (right indicator lamp) and to the left (left indicator lamp).
- **Activation of the horn (2):** Press the red button in the centre.
- **Low beam (3) or high beam (4):** Move the lever to the required position. The side, dipped-beam or side lamps will turn on automatically when you switch on the vehicle.

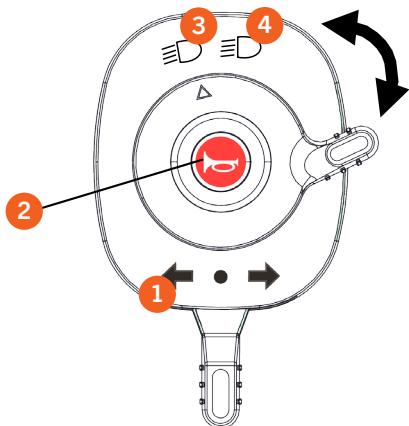

WINDSHIELD WIPER / WASHER BUTTON*


Located above the driving seat.

WINDSHIELD WIPER

OFF Position (1) - Lower position.
ON Position (2) - Central position.

WINDSCREEN WIPER

ON Position (3) - Upper position.

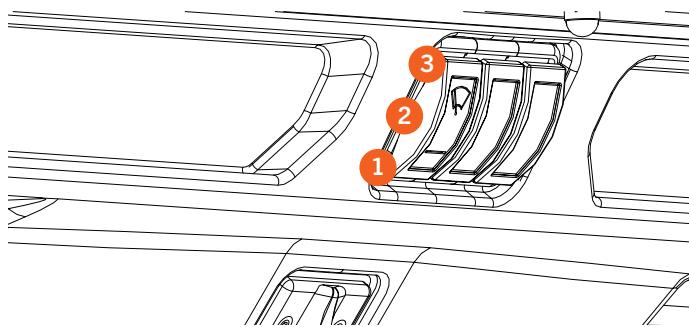

8. LOCATION OF COMPONENTS

INSTRUMENT PANEL

On the vehicle's instrument panel you can find:


1. Instruments.
2. Key start-up.
3. Emergency "Warning" flasher control.
4. Gearshift lever.
5. 4WD driveline switch.
6. Rear differential lock switch.

GEARSHIFT LEVER

The gearshift lever (4) is located in the centre the instrument panel.

It has 4 positions:

- (L) - LOW: "Short-gear" forward.
- (H) - HIGH: "Long-gear" forward.
- (N) - NEUTRAL: Neutral.
- (R) - REVERSE: Reverse gear.

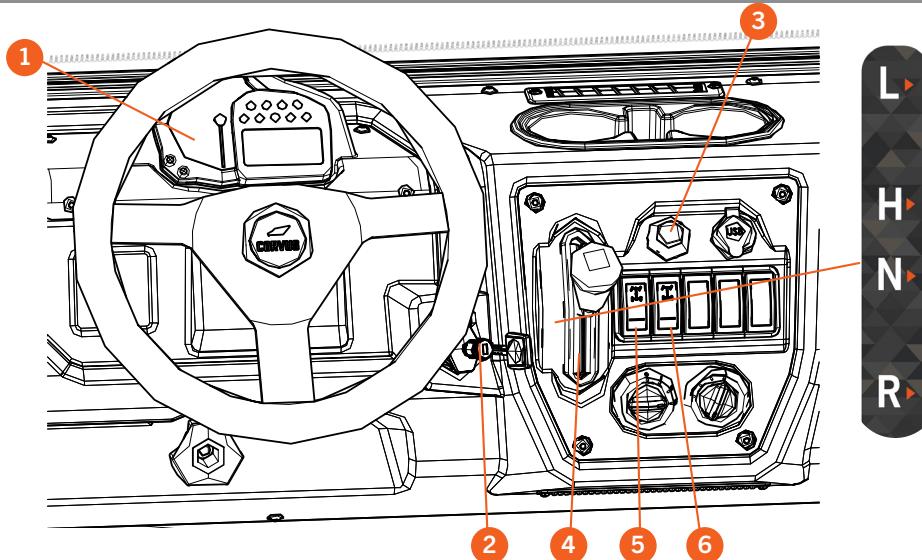

! Do not put the vehicle into reverse gear if it is not completely stationary, otherwise it may lead to accelerated deterioration or even breakage of the gearbox. Before reversing, take special care to ensure that there are no people or obstacles in your vicinity. When it is safe to continue, slowly reverse. Avoid turning sharply and apply the brakes gently to stop.

Do not force the gearshift: if a gear does not engage, accelerate gently and try to change gear again.

8. LOCATION OF COMPONENTS

2WD / 4WD DRIVELINE SWITCH

Located in the centre of the instrument panel.

It has 2 positions:

2WD: 2-wheel drive transmission -rear wheel drive- (1).

4WD: 4-wheel drive transmission (2).

REAR DIFFERENTIAL LOCK SWITCH

Located in the centre of the instrument panel.

It has 2 positions:


OFF: Rear differential unlocked (3).

LOCK: Rear differential locked (4).



THE 4WD AND THE DIFFERENTIAL LOCK MUST BE DEACTIVATED WHEN NOT REQUIRED.

EXCEEDING 20 KM/H WITH THE DIFFERENTIAL OR 4WD ENGAGED MAY CAUSE THE VEHICLE'S GEARBOX OR DIFFERENTIAL TO BREAK.

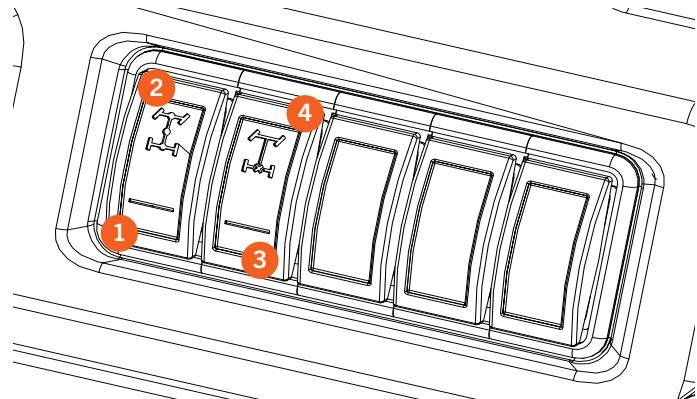

To minimise component wear, we recommend that you engage the 4WD and lock when the vehicle is at a complete standstill. NEVER engage the 4WD and lock when the steering is turned. Do not use the 4WD and lock on paved roads.

Remember to service the 4WD actuator and gearbox as indicated in the Service Chart (see page 46/47) to avoid premature deterioration.


8. LOCATION OF COMPONENTS

HEATING SYSTEM

The heating selector switches are located in the lower centre of the instrument panel. Their functions are as follows:

- Air outflow selector (1).
- Output air temperature selector (2).

The temperature selector (2) does not allow you to obtain a temperature lower than the ambient temperature. To obtain more calorific power, the engine must be at operating temperature.

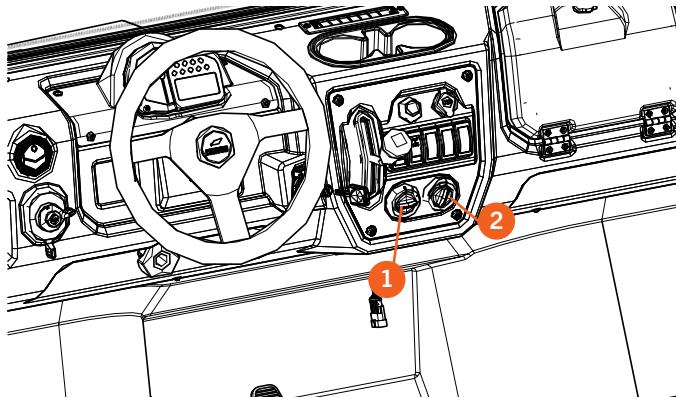

THE HEATING SYSTEM IMPROVES VISIBILITY AND HELPS TO PREVENT THE FRONT WINDOW FROM FOGGING UP. IT IS THEREFORE IMPORTANT THAT YOU ARE FAMILIAR WITH THE CORRECT OPERATION OF THE HEATING SYSTEM



If the heating system does not work properly, contact your nearest official Corvus service centre.
The heater can only work when the engine is running.

8. LOCATION OF COMPONENTS

PARKING BRAKE

The parking brake is engaged by means of a lever located on the left-hand side of the driver seat. Always apply the service brakes before engaging or releasing the parking brake.

It has 2 positions:

ON: Engage the parking brake by pulling the lever up firmly.


OFF: Lift the lever up slightly, push on the lock button and pull it down.

! **DO NOT** apply the handbrake from outside the vehicle, as the lever may bend and damage bodywork components.

! **NEVER** apply the handbrake when the vehicle is in motion, as this could lead to an accident.

The vehicle's audible warning device will be activated in the following situations:

- If the vehicle does not detect anyone in the driver's seat and the handbrake is not engaged.
- If any gear other than neutral (N) is engaged and the handbrake is on.
- If the vehicle is running on reserve fuel.
- If there is no oil pressure in the engine.
- If the engine coolant temperature is high.
- If the battery is not charging properly.

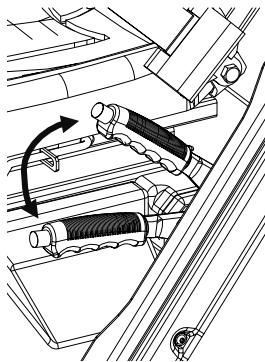

FUEL TANK CAP


The fuel tank filler cap is located on the left-hand side of the vehicle.

You must use the specific key to open it (see page 12).

- 1 - Insert the key into the lock.
- 2 - Turn the cap counterclockwise 1/4 turn.
- 3 - Remove the cap.

! Continuous movement of the vehicle can produce gas in the tank. Open the cap slowly.

! Use diesel B7/B10, NEVER use any other fuel.

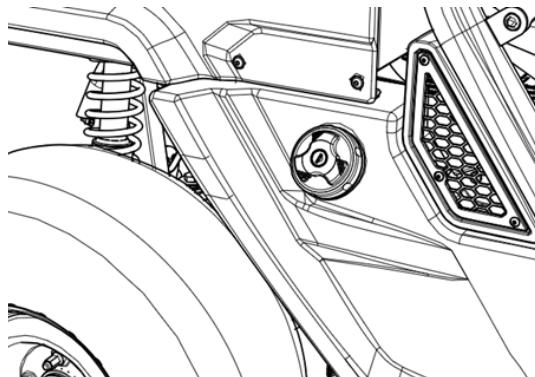


8. LOCATION OF COMPONENTS

REAR-VIEW MIRRORS

The vehicle is equipped with two rear-view mirrors (1), one on each side, and a third one on the inside in the centre* (2).


- !** **Adjust the rear-view mirrors before driving to ensure maximum visibility.**
- !** **Do not adjust the rear-view mirrors while driving.**

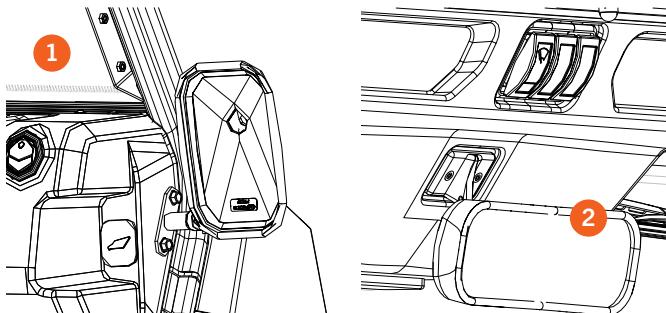

SAFETY BELTS

The safety belts are two-point belts and have a cam to release them.

- !** **Adjust the safety belts before driving to ensure maximum safety in the event of an accident.**
- !** **Always drive with the safety belts correctly fastened.
Do not adjust the belts while driving.**

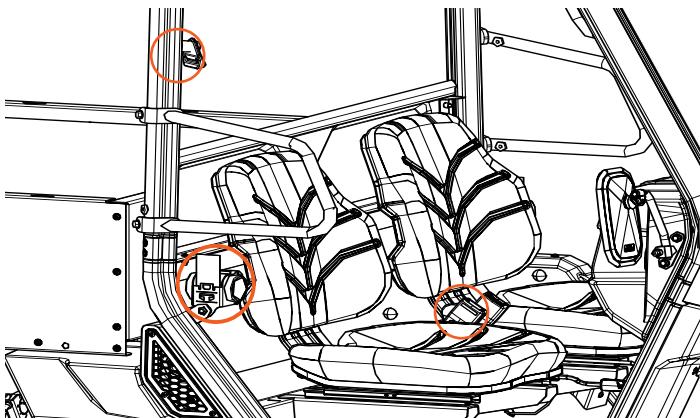

8. LOCATION OF COMPONENTS

STEERING WHEEL ADJUSTMENT


There is an adjustment knob under the steering wheel that allows you to move the position of the steering wheel along the vertical shaft for a more comfortable driving position. To do this follow these steps:

1. Turn the knob (1) anticlockwise.
2. Place the steering wheel (2) in the most comfortable driving position.
3. Turn the knob (1) clockwise to re-tighten the steering wheel.



Do not adjust the steering wheel while driving; always do so before you start driving the vehicle.

Check the adjustment knob before you move off and tighten it firmly if necessary to prevent unwanted steering wheel movement while driving.

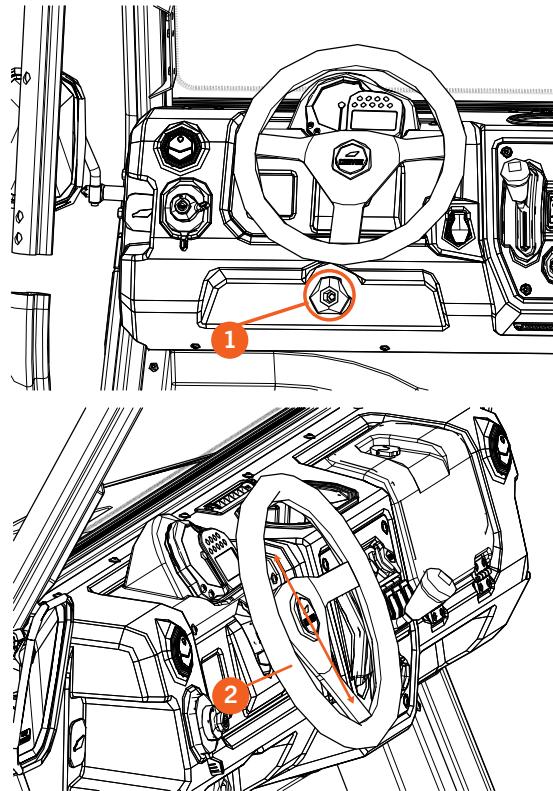

* Equipment available depending on version.
We reserve the right to modify the product and the design.

8. LOCATION OF COMPONENTS

SEATS

You can adjust the position of the seats to find your most suitable seating position:

Lengthwise Adjustment

Adjust the position by pulling the lever (1) and moving the seat forward or backward.

In the case of the driver's seat, adjust the position so that you can press the pedals with your legs slightly bent.




Adjust the driver seat when the vehicle is stationary.
Adjust the seats so that your feet rest completely flat on the floor and you can reach the pedals comfortably.



Do not tamper with the seat buzzer wiring, as this could break the electrical system.



Do not insert your hand into the seat adjustment mechanism, as it could get caught.

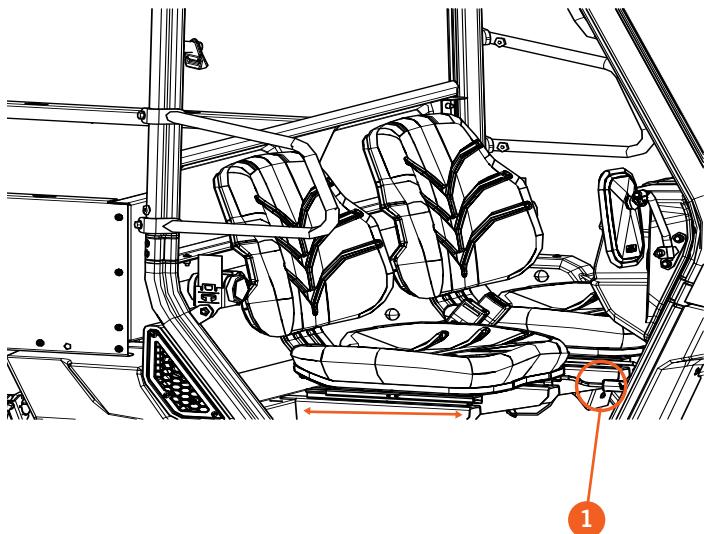

8. LOCATION OF COMPONENTS


HOOD

The hood has two rubber straps (1) which secure the hood during operation. It is important to keep them securely connected when using the vehicle and to pay close attention to their condition in order to avoid any breakage.

When you need to work on the inside of the hood, you must secure it with the metal rod (2) to prevent it from falling on the operator under its own weight.

 **Fully secure the hood with the rubber straps before starting to drive.**

Replace the straps if you notice any wear or if the material is in a poor condition.

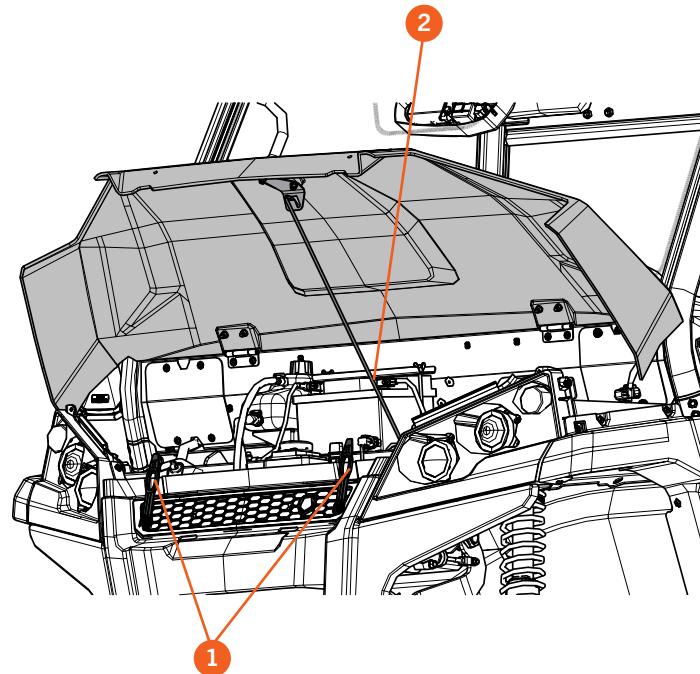

8. LOCATION OF COMPONENTS

CARGO BOX

The cargo box has a rear door (1) for easier loading and unloading of materials.


Opening the rear door:

- The door has two side bayonet levers (2).
- Grasp the door by the centre and open the two bayonet levers, one after the other.



Avoid opening both bayonets at the same time to avoid damaging the rear door or the structure of the cargo box.

Sitting on or leaning against the tailgate is prohibited. This element is not designed for this purpose.

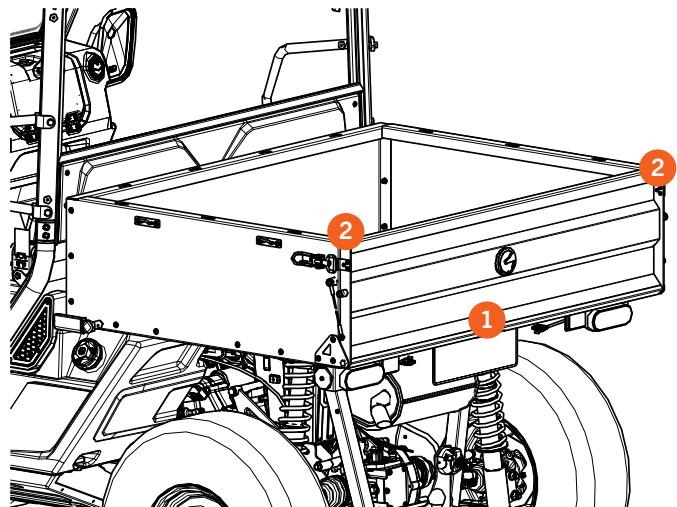

8. LOCATION OF COMPONENTS

Tilting the cargo box

To tilt the cargo box, proceed as follows:

- 1 - Turn the lever (1) clockwise.
- 2 - The box will be unhooked.
- 3 - Tilt the box up.

The box has two shock absorbers (2) that make it easy to tilt it and prevent recoil.


!

- An overload (max. 250 kg) can make the vehicle unstable and may lead to an accident.
- Place the load as far forward as possible.
- Place a mesh or a tarpaulin over light or volatile loads.
- Use straps to secure the load to prevent it moving in the box.
- The box has interior hooks (3) for fastening purposes.
- If driving on uneven or unstable terrain, reduce speed to avoid movements that may make you lose control.
- Make sure that the load does not protrude from the sides of the transport box.
- Remember that the heavier the load, the longer it will take to brake the vehicle.
- Keep any fluid tanks under control and make sure they do not move around inside the box.



NEVER carry a passenger in or on the cargo box.

Do not lift the cargo box when it is loaded. Doing so could pose a risk to the operator or even cause the vehicle to overturn. Firstly, unload the heavy load through the rear door.

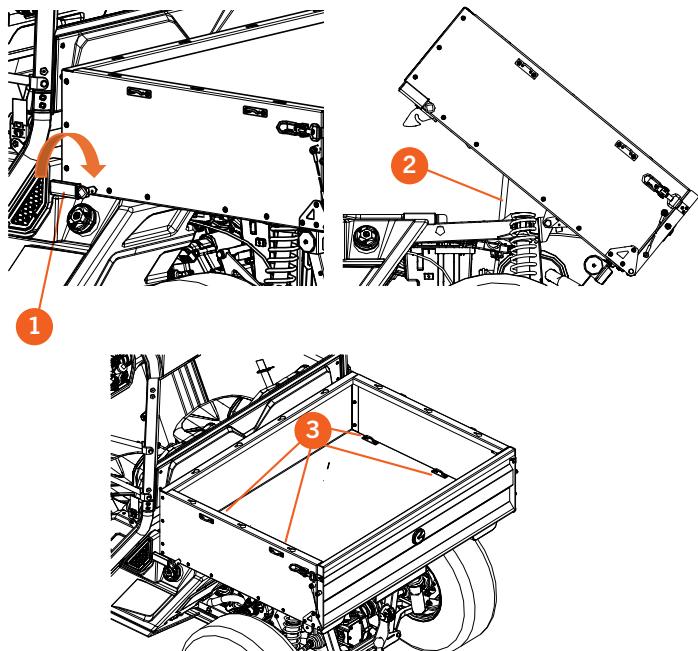


8. LOCATION OF COMPONENTS

Unloading the box

Please follow the procedure below to unload the cargo box safely:

1. Park the vehicle on a straight and level surface and apply the handbrake.
2. Open the rear door (1) and unload all or most of the load. Only lift the cargo box if you are absolutely sure you can lift it. Do not lift it with a load.
3. Once you have unloaded the vehicle, lower the cargo box and put it in place.

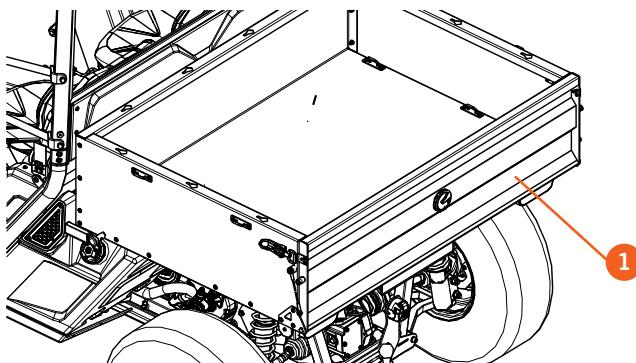

NEVER LIFT THE CARGO BOX WHILE IT IS FULLY LOADED. DOING SO COULD CAUSE THE BOX TO RISE UP UNEXPECTEDLY OR SHARPLY, WHICH WOULD BREAK THE SPRINGS AND COULD CAUSE SERIOUS INJURY TO THE OPERATOR.

ALWAYS UNLOAD THE VEHICLE ON A LEVEL SURFACE TO PREVENT THE VEHICLE FROM OVERTURNING.

NEVER DRIVE THE VEHICLE WITH THE CARGO BOX RAISED OR THE REAR DOOR OPEN.

PLACE A MESH OR A TARPAULIN OVER LIGHT OR VOLATILE LOADS.

USE SLINGS TO SECURE THE LOAD TO PREVENT IT FROM MOVING IN THE BOX.

MAKE SURE THAT THE LOAD DOES NOT PROTRUDE FROM THE SIDES OF THE TRANSPORT BOX.

REMEMBER THAT THE HEAVIER THE LOAD, THE LONGER IT WILL TAKE TO BRAKE THE VEHICLE.

KEEP ANY FLUID TANKS UNDER CONTROL AND MAKE SURE THEY DO NOT MOVE AROUND INSIDE THE BOX.

NEVER DRIVE WITH A PASSENGER IN OR ON THE CARGO BOX; THIS COULD CAUSE SERIOUS INJURY OR EVEN LEAD TO THE DEATH TO THE PASSENGER. PASSENGERS MAY ONLY RIDE IN THE PASSENGER SEAT.

DO NOT PLACE HEAVY LOADS ON THE REAR DOOR; THIS COULD MAKE IT COLLAPSE.

8. LOCATION OF COMPONENTS

TRAILER

The vehicle is fitted with a towball (1) at the rear.

MODEL: CORVUS TERRAIN DX4S

MAX towing capacity on trailer WITH inertia brake	600 kg
MAX towing capacity on trailer WITHOUT inertia brake	360 kg
Max. vertical towball load (1)	50 kg

- !** The vehicle can only tow more than 360 kg if the trailer being used is fitted with an inertia brake and when the maximum load that can be borne by the vehicle is not being exceeded.
- Do not pull or tow objects from any point on the vehicle other than the winch (if fitted) or from the tow points provided (one at the rear with a towball and one at the front).
- Never carry passengers on the trailer.
- When driving the vehicle, avoid sharp turns or aggressive driving. Accelerate gradually and bear in mind that the braking distance will be affected by the load on the trailer.
- Do not exceed 16 km/h when towing a load and drive the vehicle with the low gear (L) engaged.
- Do not drive on steep or dangerous terrain when towing a load. If you have to drive on difficult terrain, reduce your speed considerably and pay attention at all times to elements that pose a potential hazard to your safety.




When parking a vehicle with a trailer it is important to park on a horizontal surface. Do not park on a slope or leave the vehicle parked with a gear engaged, as this will not prevent the vehicle from rolling downhill. Always apply the hand brake. To improve vehicle stability and reduce the effects of towing the load to a minimum, it is advisable to distribute the weight of the load between the box and the trailer, if possible.

Secure the load on the trailer properly and ensure that the area between the trailer and the vehicle is free of anything that might damage the trailer or affect your driving.

On the top of the towball there is a pineapple-shaped 7-pin electrical trailer connector with a maximum power rating of 150 W. Exceeding this can cause serious damage to the electrical system and should not be exceeded under any circumstances. This maximum power will be even lower if there is a device connected to any of the vehicle's auxiliary sockets.

Whenever the vehicle is towing, keep clear of the area between the vehicle and the object being towed. Failure to follow these instructions may result in serious injury or death.

*The above list of hazards and risks is not exhaustive. Use caution.

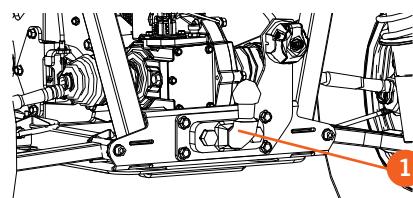

9. SPECIFICATIONS

DIMENSIONES / CAPACIDADES

L x W x H	2650 x 1449 x 1930
Wheelbase	1806 mm
Ground clearance	242 mm
Kerb weight	700 kg
Towing capacity	600 kg
Payload capacity	500 kg
Load capacity	250 kg
Fuel capacity	37.5 L

ENGINE

Type	Yanmar diesel, 3-cylinder, 4-stroke
Characteristics	800 cc/22 hp/16.2 Kw
Cooling	Liquid
Engine torque	49 Nm/2500 rpm
Maximum speed	EU:T1a 40 km/h T1b 60 km/h
Gearbox	Gearbox CVT automatic. L-H-N-R
Transmission	2WD / 4WD with rear differential lock
Steering	EPS (electric power steering)

CHASSIS

Front tyre	26x9, R12
Rear tyre	26x11, R12
Wheel rims	12" steel
Suspension (front and rear)	Both McPherson struts with 205 mm travel
Front brakes	Hydraulic dual-piston disc, 195 mm
Rear brakes	Hydraulic disc brakes, 195 mm
Parking brake	On rear wheels. Independent callipers
Underbody protection	Full ABS. High-density
Coupling	2" front and rear ball
Passive safety	3-point belt
Turning radius	2.99 m
No. passengers	2

CARGO BOX

Dimensions (mm)	900 x 1,191 x 300
Material	Steel
Load capacity	250 kg


COLORS



HOMOLOGACIÓN

EU T1a & T1b

10. MULTIFUNCTION PANEL

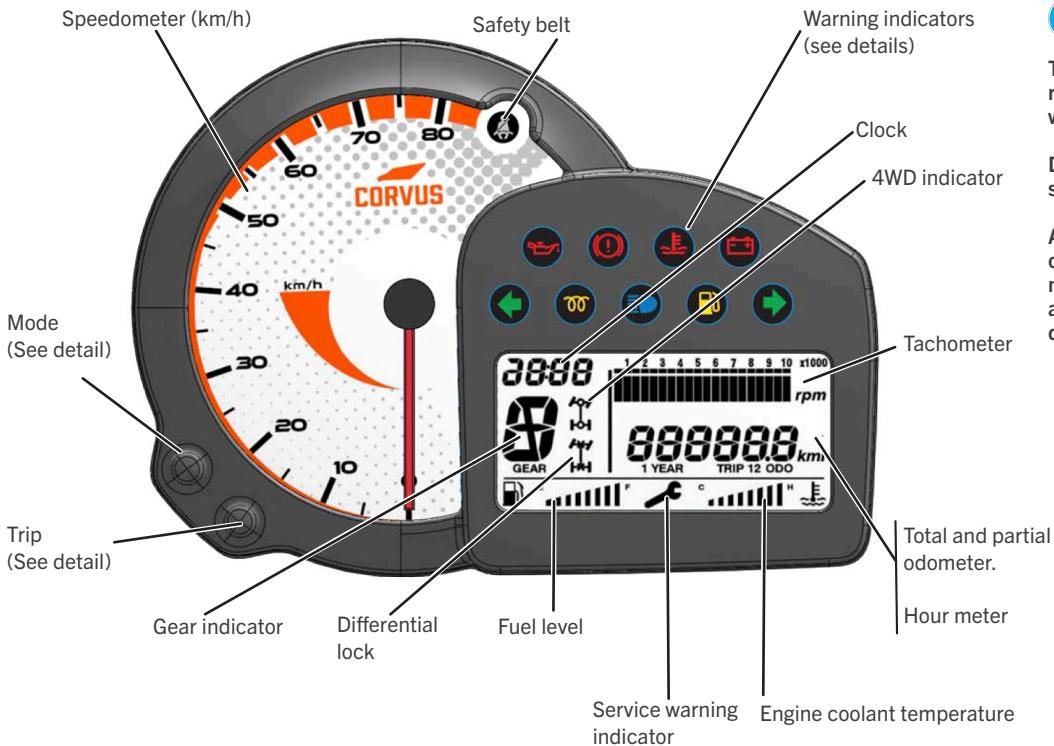

The multifunction device is water resistant but not waterproof. Do not wash it with water under pressure.

Do not leave the device in direct sunlight when the vehicle is not in use.

Avoid contact with fuel, degreasers or other chemical cleaners as they may damage the device. Remember to always pay attention to the road while driving.

10. MULTIFUNCTION PANEL

WARNING INDICATORS



Oil pressure

Warning indicator to show the correct oil pressure in the engine. The warning indicator will illuminate for a few seconds when you switch on the vehicle using the ignition key. Once the vehicle has started up, it will turn off. More information in the maintenance section of this manual. If the warning indicator illuminates and the buzzer starts to sound when the engine is running or when you are driving, you must turn off the engine and contact your nearest CORVUS garage.



Parking brake and brake fluid level malfunction

Warning indicator to indicate that:

- the parking brake is engaged.
- the driver is not seated in the seat.
- or there is a malfunction in the braking system or a lack of brake fluid.

If that is the case, park the vehicle and contact your nearest CORVUS garage. The warning indicator will illuminate for a few seconds when you switch on the vehicle using the ignition key. More information in the maintenance section of this manual.



Engine coolant temperature

Warning indicator to indicate the correct temperature of the coolant in the radiator. The warning indicator will illuminate for a few seconds when you switch on the vehicle using the ignition key.

More information in the maintenance section of this manual. If the warning indicator illuminates and the buzzer starts to sound when the engine is running or when you are driving, you must turn off the engine and contact your nearest CORVUS garage.



Battery level

Warning indicator to indicate the battery is charging correctly. The warning indicator will illuminate for a few seconds when you switch on the vehicle using the ignition key. More information in the maintenance section of this manual. If the warning indicator illuminates and the buzzer starts to sound when the engine is running or when you are driving, you must turn off the engine and contact your nearest CORVUS garage.



Steering indicators

Warning indicator will illuminate when you use the lever or the emergency button to indicate a change of direction.



Ignition system

The petrol engine uses spark plugs for ignition. Under normal conditions, the engine starts immediately when the ignition key is turned. If an ignition system warning light is displayed, you should stop the vehicle and contact your nearest Corvus service centre.



Long-range lights

Warning indicator to indicate that the long-range lights are switched on to enable greater visibility. Change to dipped headlights when vehicles or people are in front of you.



Fuel level

Fuel tank capacity of 38 L of petrol. The warning indicator will illuminate when there are 7 litres of fuel left and the buzzer will sound for 5 seconds.

10. MULTIFUNCTION PANEL

FUNCTIONALITIES

Speedometer

- The dial of the speedometer has a linear scale of 0 to 80 km/h.
- The minimum speed displayed will be 3 km/h.

Odometer

- When the odometer is shown, it will display the ODO symbol.
- We can access TRIP-1 from the odometer by pressing MODE (<2 s).
- We can access the running hours from the odometer by pressing TRIP (>2 s).
- We can use the odometer to change the time by pressing MODE (>2 s).

Hours of operation

- The indicator has 6 digits, including a decimal point indicating the number of 10-minute fractions that have elapsed. It also shows the letter "h" for the hours of operation.
- The counter only increases in value when the engine is started using the ignition key.
- We can access the odometer from the hour meter by pressing TRIP (>2 s).
- We can access TRIP-1 from the odometer by pressing the "MODE" button (<2 s).
- We can change the time from the hour meter by pressing MODE (>2 s).

Trip-1 (partial counter 1)

- The indicator has 4 digits (with a decimal point) + the KM symbol.
- When the partial counter reaches 999.9 km, the counter returns to 0.
- Pressing on the TRIP button (for >2 s) resets the counter to 0.
- When the partial counter is shown, the TRIP 1 symbol is shown.
- We can access TRIP-2 from TRIP-1 by pressing MODE (<2 s).

Trip-2 (Partial counter 2)

- The indicator has 4 digits (with a decimal point) + the KM symbol.
- When the partial counter reaches 999.9 km, the counter returns to 0.
- Pressing on the TRIP button (for >2 s) resets the counter to 0.
- When the partial counter is shown, the TRIP 2 symbol is shown.
- We can access the ODOMETER from TRIP-2 by pressing MODE (<2 s).

Maintenance service

The first running-in maintenance interval will be either 500 km, 1 year or 50 hours of operation.

- Maintenance intervals have been established for every 2500 km, each year "1 YEAR" or every 200 hours of operation.

10. MULTIFUNCTION PANEL

200 HOURS

- The hours will start at 200 and decrease until they reach 0h.
- The hours remaining before maintenance is due will appear for 5 seconds when you turn the ignition on.
- During these 5 seconds, pressing the button TRIP for less than two seconds will display the days remaining before the “1 Year” service is due, with a - symbol.
- During these 5 seconds, if you hold down the “MODE” button for less than two seconds, it will display the km that remain before a service is due or the km that have been exceeded.
- When the hours are equal to 200 hours, the service icon will remain on.

2500 KM

- When you have travelled 2300 km, the service symbol will flash on the screen.
- When you reach 2500 km, the service symbol will remain on.
- When the kilometres are displayed, if the maximum no. of km has not already been exceeded, the number will be preceded by a - sign.
- If you have exceeded the no. kilometres for when the next inspection is due, when you start the vehicle the excess kilometres will be displayed on the screen, preceded by the letter E.

1 YEAR

If 1 year goes by before you have travelled the kilometres at which maintenance is due, the service symbol will activate with the text “1 Year”. When there is one month left before the service is due, the service sign will flash with the “1 Year” symbol.

When the days of use are 365 or more, both icons will remain turned on. To activate the icon for the 1 Year Service, you must turn off the vehicle and when you turn it on again, the icon will appear.

The counter associated with maintenance-by-time will not activate until the vehicle has covered a distance of at least 10 km.

MAINTENANCE INTERVAL RESET

Resetting the service will establish the next revision at 200 hours, 2,500 km or 1 year without considering the values at the time the reset is performed.

To reset the service interval, press “MODE” for 10 seconds (the service icon will flash), then press “TRIP” for 5 seconds. We have 10 seconds within which to press the TRIP button once the service icon flashes, before it times out.

You cannot be moving at any speed when performing the reset.

10. MULTIFUNCTION PANEL

24 H CLOCK

The clock is displayed in the 24H format (HH:MM + a Clock symbol). To reset the clock, follow the procedure below:

- Press the MODE button for more than 2 seconds (until the two hour digits flash).
- Repeatedly press the TRIP button to increase the digits of the hours.
- Keep pressing the TRIP button to increase the hours.
- Press the MODE button to accept the hours and change the field to the minute units.
- Repeatedly press the TRIP button to increase the minutes.
- Keep pressing TRIP to increase the minutes.
- Press the MODE button to accept the minutes and exit the clock setting function.
- If you do nothing for more than 10 seconds, and if you have not pressed any button, the clock setting function is exited automatically.
- If you have changed the hour or minutes, but you do not save them, the time-out will be 20 seconds.
- You can only change the time if the vehicle is completely stopped, without any speed pulses being received.

Gear

The gear will be indicated on the screen by an alphanumeric digit that can display:

- N to indicate that you are in NEUTRAL.
- R to indicate that you are in REVERSE GEAR.
- L to indicate that you are in SHORT GEAR.
- H to indicate that you are in LONG GEAR.

Revolution counter

The instrument displays the engine revolutions via a bar indicator. It has a total of 10 bars that will serve to indicate the range of 0 to 5000 rpm (one bar is equivalent to 500 rpm).

MODE - TRIP BUTTONS

INDICATORS	PUSH-BUT				NEXT CONDITION
	SHORT MODE	SHORT TRIP	LONG MODE	LONG TRIP	
ODO	x				TRIP 1
				x	H. OF OPER.
			x		ADD TIME
HOURS OF OPERATION	x				TRIP 1
				x	ODO
TRIP 1	x				TRIP 2
				x	RESET TRIP 1
TRIP 2	x				ODO
				x	RESET TRIP 2
ADD TIME		x			ADD TIME
	x				INCREASE MIN.
ADD MINUTES		x			INCREASE MIN.
	x				SAVE TIME
SERVICE		x			"1 YEAR" SERVICE
	x				"KM" SERVICE

USAGE INFORMATION

* Equipment available depending on version.
We reserve the right to modify the product and the design.

II. DRIVING-IN STAGE

It is ESSENTIAL to complete the running-in period, in order to ensure the long-term durability and proper operation of your engine.


The following intervals should be respected:

- During the first 100 km, you should not drive at full throttle.
- From 0 to 200 km: Drive at between 50% and 75% engine load (throttle position), alternately, avoiding continuous use of 75% engine load.
- From 200 to 300 km: Drive in the same way but occasionally, albeit for no more than 5-10 seconds, with the engine running at full load.
- From 300 to 400 km: Drive at 75% to 100% of engine load, alternatively, without maintaining peak engine load.
- From 400 km onwards, gradually increase the load for about 60 km to 80 km, until you reach peak performance.

⚠ Reckless acceleration can cause problems in the engine. Take care that you use the skills and techniques needed to drive the vehicle.

I2. DAILY INSPECTION BEFORE DRIVING

⚠ These controls can actually be performed very quickly, it is a question of habit. the user knows to what use the vehicle has been subjected the last time it was used and where to intensify this control. Running this set of checks means greater safety for the user and, undoubtedly, better and more economical maintenance of your vehicle.

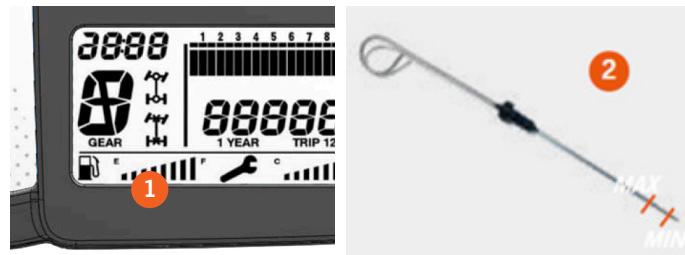

Before driving, put the vehicle in horizontal position and perform the following controls:

Do you have enough fuel?

Check the current fuel level on your multifunction panel /1); try to fill the tank before each use.

Is the engine oil level correct?

Use the cap/dipstick (2) to check that the level is adequate and, if necessary, add oil.

12. DAILY INSPECTION BEFORE DRIVING

Is the coolant level correct?

You will find the coolant reservoir (1) beneath the hood.

The liquid must not exceed the MAX line; if necessary, add coolant.


Do not open the cap when the engine is warm, you run the risk of serious scalding.

Recommended fluid: 50% long time (-35°).

 Do not allow coolant to drip onto skin or any surface. It may cause scalding or corrosion. If coolant comes into contact with skin, clean thoroughly with water.

 If the coolant level is correct and the vehicle continues to heat up, even if it has only been running for a few minutes, this may be the result of bubbles in the circuit and it will need to be purged.

If the high temperature persists, contact your nearest official CORVUS service centre.

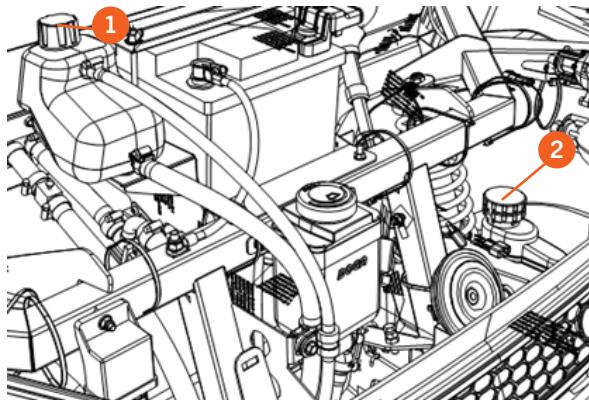

Is the brake fluid reservoir level correct?

It is located beneath the hood. The container is translucent (2).

Its level must be between MIN/MAX; if necessary, add brake fluid.

 If the brake fluid level is outside the limits shown on the tank, check the thickness of the brake pads and make sure they have not reached their usage limit.

If the thickness is correct, top up the brake fluid and make sure that there are no leaks. If in doubt, immediately go to your official CORVUS service centre. They know what to do in each case. This can affect your safety.

NEVER drive the vehicle if the brake fluid level is low.

Check the level regularly and carry out maintenance as indicated in the Service Chart (see page 46/47).

12. DAILY INSPECTION BEFORE DRIVING

Do the brake discs look okay?

Any important scratches, cracks, excessive wear, etc. can be easily spotted.

 Check that the discs are at least 3.5 mm thick on the front and rear wheels.

Go immediately to your CORVUS dealer if you don't know what to do in each case. This can affect your safety. You should not drive the vehicle.

Are the front and rear brake pads in good condition?

Check the thickness of the remaining lining, ensuring that the thickness of the lining is not less than 1.5 mm. If it is, contact your official CORVUS service centre to replace them.

Check that the brake pads do not rub against the discs when the hydraulic brake pedal or parking brake lever is deactivated.


 **NEVER** drive a vehicle with worn brake pads. Brake pads in this condition lose their effectiveness and could pose a serious risk to your safety.

Visit an official CORVUS service centre to have the brake pads replaced immediately.

 Clean the area around the wheel spindle and the brakes regularly to prevent the build-up of mud and other foreign matter. Allowing these to build up could lead to loss of brake effectiveness and rapid deterioration of components.

Do the commands feel okay to the touch?

The brake pedal, accelerator pedal, gearshift lever, differential lock lever, 2WD/4WD driveline level, hand brake lever, light panel, start-up system, horn and indicators. All these controls and control components have their own specific operation and feel, with any change indicating that there may be a fault or damage. Nobody knows your vehicle better than you, and any change you notice should be reported immediately to your official CORVUS service centre.

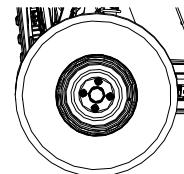

Are the tyres in a good condition?

If in doubt, **ALWAYS** check the pressure level. If the problem persists, or is repeated, there may be a leak: visit your official CORVUS service centre.

Recommended front/rear pressure:

- 1.0 bar (empty vehicle).
- 1.5 bar (vehicle at full load).

Tyre tread wear limit: 3.5 mm deep.

 Incorrect tyre maintenance could lead to a loss of control and an accident, which may result in serious injury or even death. Only use the size and type of tyre specific to this vehicle and always follow your tyre manufacturer's maintenance instructions.

12. DAILY INSPECTION BEFORE DRIVING

Is there the risk of any element falling off?

Fenders, side covers, tank, mud flaps, etc. If there is any such risk, you should try to attach it or remove it so that it does not fall off, for the sake of your safety. Visit your CORVUS dealer to have it repaired.

Are there any leaks?

Visually check for leaks, assessing them on the basis of their location, amount and the product that is leaking (be aware of the danger of fire). Always visit your official CORVUS service centre or dealer as soon as possible.

Do the safety belts work properly?

The safety belt will not work properly if the belt's buckle or strap is dirty or damaged. For this reason, always keep the buckle and the strap of the safety belts clean, because otherwise, the tongue of the belt will not click into place correctly.

Regularly check the safety belts to ensure that:

- They are not damaged.
- They are not in contact with sharp edges.
- They are not entangled.

If you have any questions or if there is a fault, please contact your official CORVUS service centre.

Does the lighting and signalling system light up properly?

Regularly check all the bulbs of the lighting and signalling system are working properly. If you detect that any of them have burned out, replace them immediately.



Regularly review the tightening torque of the bolts of the vehicle, paying special attention to the suspension, bushings, wheel spindles, driveline, steering and brakes.

NEVER drive without a bolt or a nut.

The lighting and signalling system are important safety measures: you should never drive the vehicle without either of them.

Daily checks can prevent breakdowns and accidents.

13. START-UP PROCEDURE

Follow these steps to **start up** your CORVUS:

1. Sit in the driver's seat and fasten the seat belt.
2. Place the gearstick (1) in the N position (neutral).
3. Step on the brake pedal without stepping on the accelerator.
4. Turn the key (2) to the preheating position and hold it in that position for a few seconds until the "diesel heaters" signal turns off.
5. Then turn the key (2) to the start-up position until the engine starts turning over. Do not depress the accelerator pedal when starting the vehicle.
6. Once you have started up the engine, let go of the ignition key.

NOTE: Make sure that the engine maintains a minimum idling speed of 1,250 rpm.



⚠ **Never attempt to get on or off the vehicle while it is in motion and do not jump out of the vehicle. Always face the vehicle when getting in or out.**
Do not use the controls as hand grips. This may cause inadvertent machine movements.
Always keep the steps and floor of the vehicle clean to avoid slippery conditions.
The gearshift lever must be operated with the vehicle completely stopped and the engine running at the minimum possible level, without accelerating. Failure to follow this instruction can cause severe damage to the transmission.
Do not drive with the hand brake on.

Do not operate the hand brake to stop the vehicle. doing so can cause serious damage to the braking system of the vehicle and can be dangerous.

When moving into gear, accelerate gently, avoiding abrupt accelerations.




Before starting the engine, make sure the gearshift lever is in neutral. **DO NOT ACCELERATE.** Failure to follow this instruction can cause severe damage to the gearbox.

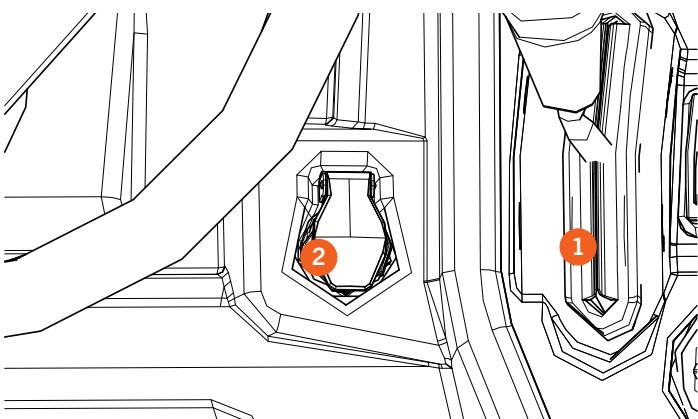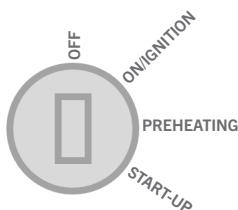

13. START-UP PROCEDURE

To begin driving with your CORVUS, follow these steps:

1. Apply the brake pedal (1), without stepping on the accelerator.
2. Put the gearshift lever (2) in L, H or R.
3. Release the parking brake. Make sure that is completely disconnected.
4. Accelerate gently (3) in the selected gear. Occasionally, when accelerating the vehicle, sometimes it may not move and it may make a small metallic clanking noise. This is due to the fact that the gear has not been fully engaged. If this happens, stop accelerating and wait for the engine to return to idling speed, push the gearshift lever in the direction you want to go and accelerate gently at the same time, you will notice a "click" on the gearshift lever, confirming that the gear has been fully engaged. You can now release the gearshift lever and start moving.

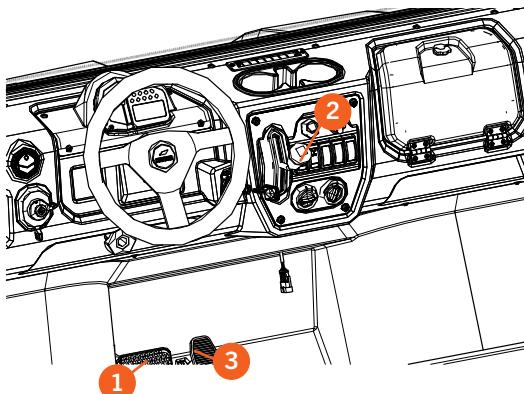

14. USE OF THE REAR DIFFERENTIAL LOCK AND UNLOCK*

! To minimise component wear, we recommend that you engage the lock when the vehicle is at a complete standstill.

It must NEVER be used on the road or on asphalt. The lock may only be used up to 20 km/h.

Failure to follow this instruction can cause severe damage to the transmission system and gearbox.

To **LOCK** the rear differential, perform the following steps:

1. Step on the brake pedal, without stepping on the accelerator.
2. Put the gearshift lever into NEUTRAL (N) - central position.
3. Activate the differential lock switch.
4. Wait until the differential warning lights up on the screen.
5. Continue driving.

To **UNLOCK** the rear differential, perform the following steps:

1. Apply the brake pedal until the vehicle comes to a complete stop.
2. Put the gearshift lever into NEUTRAL (N) - central position.
3. Turn off the differential lock switch.
4. Wait until the differential warning light disappears from the screen.
5. Continue driving.

15. USE OF THE 2WD / 4WD DRIVELINE*



To minimise component wear, we recommend that you engage the 4WD when the vehicle is at a complete standstill. It must NEVER be used on the road or on asphalt. The 4WD may only be used up to 20 km/h. Failure to follow this instruction can cause severe damage to the transmission system and gearbox.

To **ENABLE** the 4WD driveline perform the following steps:

1. Step on the brake pedal, without stepping on the accelerator.
2. Put the gearshift lever into NEUTRAL (N) - central position.
3. Activate the 4WD lock switch.
4. Wait until the 4WD warning lights up on the screen.
5. Continue driving.

To **DISABLE** the 4WD driveline perform the following steps:

1. Apply the brake pedal until the vehicle comes to a complete stop.
2. Put the gearshift lever into NEUTRAL (N) - central position.
3. Turn off the 4WD lock switch.
4. Wait until the 4WD warning light disappears from the screen.
5. Continue driving.

16. DRIVING TIPS

GENERAL INFORMATION

- Keep your body completely inside the vehicle at all times while driving.
- Keep both hands on the steering wheel while driving.
- The front passenger seat can be occupied by a passenger while the vehicle is in use. Make sure that the passenger remains alert.
- Make sure that the passenger is properly seated and has their safety belt fastened.
- Be aware of potential hazards that may enter the vehicle.
- Sudden or abrupt driving manoeuvres can result in a loss of control and may even cause the vehicle to overturn, even in open areas and on flat surfaces.

PRECAUTIONS WHEN TURNING

- Turning the steering wheel sharply and at considerable speed could cause the vehicle to overturn. Drive with anticipation to avoid having to turn suddenly. Sudden turns may be dangerous as they can cause a loss of control, overturning, and collisions.
- Avoid driving with the vehicle while it is tilted sideways and, if you must turn, do so gradually. If the vehicle begins to slide downhill or you feel it may roll over, immediately turn downhill and stop. Manoeuvre the vehicle slowly and carefully until you can drive straight downhill.
- Brake before turning and avoid braking sharply while turning.
- If you need to turn when the car is at a standstill or at low speeds, accelerate gradually.

16. DRIVING TIPS

DRIVING ON SLOPES OR HILLS

- Try not to drive over hills, but if it is unavoidable, drive slowly and do not proceed if you think the vehicle may overturn. Engage all-wheel drive for slopes. Climb slopes in a straight line, keeping your speed and throttle constant.
- When you cannot avoid getting out of your vehicle on a slope, take special care. If you leave the vehicle unattended, place chocks on the rear wheels on the downhill side and keep children, pets and other occupants away from the gear selector.
- Steep slopes could cause the vehicle to overturn. Avoid obstacles and changes in terrain that could cause the vehicle to lift up on one side or slide. If the vehicle seems to be starting to roll over or slide, immediately turn downhill.
- Drive slowly, at a steady speed, and if the vehicle stops moving forward, gradually apply the brakes until it comes to a complete stop. Put the vehicle in reverse gear and let it move slowly down the hill or slope, applying the brakes so as not to lose control.
- NEVER accelerate down a hill or slope, step lightly on the brake to avoid losing control.
- If you cannot stop the vehicle from overturning, keep your body completely inside the vehicle, press firmly on the floor and hold on tightly to the steering wheel or passenger hand grip.
- Do not attempt to stop the vehicle from rolling over with any part of your body.

DRIVING ON PAVED SURFACES

- As far as possible, try not to drive on paved surfaces.
- If you do need to drive on a paved road, turn gradually and drive cautiously.
- Do not engage 4WD or the differential on paved roads.
- Do not attempt to stop the vehicle from rolling over with any part of your body.

PAVED SURFACES

- As far as possible, try not to drive on paved surfaces.
- If you do need to drive on a paved road, turn gradually and drive cautiously.
- Do not engage the 4WD or the differential on paved roads.

DRIVING THROUGH WATER

- Avoid driving through water if it is not necessary.
- NEVER drive through fast flowing water as this could cause you to lose control, be carried away by the current and even overturn.
- Before entering the water, choose where to cross, avoiding rocks or sudden drops. Always choose gradual descents.
- Take special care and attention when performing these operations
- Do not enter the water if it is deeper than 37 cm because water could enter the front differential and the 4WD actuator.
- Do not drive through water at high speed, even shallow water.

REVERSE GEAR

- NEVER shift into reverse gear if the vehicle is not completely stationary as this causes rapid deterioration of the gearbox and could damage it.
- If you need to manoeuvre in a confined space, make sure you bring the vehicle to a complete stop before shifting between forward and reverse gears and vice versa.

DRIVING THROUGH WATER

- Avoid driving through water if it is not necessary.
- NEVER drive through fast-flowing water as this could cause you to lose control, be carried away by the current and even overturn.
- Before entering the water, choose where to cross, avoiding rocks or sudden drops. Always choose gradual descents.
- Take special care and attention when performing these operations.
- Wet brakes may have less braking power. After leaving the water, test the brakes. Gently apply them several times while driving slowly. The friction will help to dry the pads.

16. DRIVING TIPS

- Do not enter the water if it is deeper than 37 cm because water could enter the front differential and the 4WD actuator.
- Do not drive through water at a high speed, even shallow water.

HIGH-SPEED DRIVING

- Driving all-terrain vehicles to test the limits of your skills and abilities can be very dangerous for the driver, passenger, and anyone nearby. High-speed driving can lead to a loss of control, crashes or rough landings that can seriously injure occupants (even without the vehicle rolling over or being damaged).
- Having the basic skills to drive this vehicle does not qualify the driver to attempt to drive safely at high speeds.
- Gradually develop your skills through training, practice and experience with the various driving modes of this vehicle and the terrain on which you are driving.
- If you plan to use the vehicle for high-speed off-road competitions, you may need additional safety equipment. Check the rules that apply to your competition.
- Driving at high speeds may affect the running time of the battery. Make sure that the battery is sufficiently charged for the intended operating distance.

DRIVING IN OR NEAR WOODED OR BUSHY AREAS

Be cautious when driving near trees, particularly on narrow paths. Tree branches or bushes could enter the vehicle and strike or injure its occupants.

DRIVING ON SNOW OR ICE

- Always keep the vehicle's pedals free of snow and ice. Brake often to minimise any build-up of snow or ice on the brake pads, which can reduce braking performance.
- Never drive the vehicle on a frozen body of water unless you have verified that the ice can support the weight of the vehicle. If the vehicle falls through the ice, serious injury or death may result.

DRIVING ON DUNES OR SANDY TERRAIN

Exercise additional caution when driving on or near sand dunes. Stay alert to changes in the terrain and never drive over the top of a slope blindly and at high speed. An obstacle, steep drop, or person could be on the other side of the slope.

DRIVING IN LOW-VISIBILITY CONDITIONS

Exercise additional caution and drive slowly in conditions with poor visibility, such as fog, rain, or a lack of natural light.

REVERSING

- NEVER shift into reverse gear if the vehicle is not completely stationary as this causes rapid deterioration of the gearbox and could damage it.
- Before shifting to reverse gear, take special care to ensure that there are no people or obstacles in your vicinity. When it is safe to continue, slowly reverse.
- If you need to manoeuvre in a confined space, make sure you bring the vehicle to a complete stop before shifting between forward and reverse gears and vice versa.
- NEVER force the reverse gear, if it does not engage, gently press the accelerator and try again.

DRIVING ON UNFAMILIAR TERRAIN

- If you are not familiar with the terrain you are driving on, check to see if there are any hidden obstacles or anything that could be hazardous to your work.
- Drive carefully and always use existing roads.
- Drive with extreme caution if visibility is poor.

DRIVING A LOADED VEHICLE

- When driving with a loaded box or a trailer:
 - Reduce speed and drive in LOW (L) gear.

16. DRIVING TIPS

- Avoid hills or slopes.
- Load the box correctly and drive with extreme caution.
- A load greater than XYZ kg could pose a serious risk to the occupants of the vehicle; NEVER exceed this load in the box.
- When towing a load:
 - Use a low (L) gear and do not exceed 16 km/h when towing a heavy load.
 - Do not drive aggressively when towing a load.
 - Bear in mind that the braking distance and stability of the vehicle will be affected by the towed weight.
 - Never park on a slope when carrying a load.
 - Avoid driving on unfamiliar or difficult terrain. If you must do so, reduce your speed considerably and be alert to any potentially dangerous elements you may encounter.
 - Spreading the weight between the load box and the trailer, where possible, will help to improve the stability of the vehicle.

HOW TO ACT IN THE EVENT OF VEHICLE DAMAGE, COLLISION OR ROLLOVER

- Do not continue driving if the vehicle may have been damaged, if it has been involved in a collision or if it has overturned. Driving a vehicle that has been damaged, has been in a collision or after it has overturned may cause a loss of control, a rollover or an accident, which could result in serious injury or death. If you are unable to transport the vehicle safely on your own, contact a recovery and towing service.
- After any collision, rollover, or other accident, ensure that an official Corvus service centre inspects your vehicle for damage.
- Be prepared for the possibility of your vehicle being damaged or rendered inoperable, especially in remote areas. Whenever you drive, plan ahead on how to get help and stay safe until help arrives.

17. CLEANING THE VEHICLE

After driving, check the vehicle for damage or dirt to make sure it can be stored and driven again safely. Keeping your vehicle clean can extend the life of various components.

To clean your CORVUS, perform the following steps:

1. Plug the exhaust system to prevent water from getting in.
2. Remove the underbody protector.
3. Remove mud and dirt with a jet of water at low pressure.
4. Clean any especially dirty areas with a special cleaner or soap product.

DO NOT USE CORROSIVE PRODUCTS OR ACIDS.

5. Rinse with a jet of water at low pressure.
6. Let the vehicle drip dry naturally.
7. Release the exhaust pipe, replace the underbody protection and drive around in the vehicle for a short distance until the engine reaches operating temperature, and then apply the brakes. This will let the water evaporate completely in the areas that are difficult to access.



It is important to clean the vehicle frequently, especially the area around the wheel spindle, brake callipers and the inside of the underbody protector.

NEVER use high-pressure equipment to clean the vehicle. Avoid aiming the jet of water directly at the multifunction panel, bearings, air cleaner, switches, controls or any other electrical element.

It is very detrimental to briefly start up the engine when the vehicle is stationary, because the engine is not hot enough and the air vapour created during combustion condenses and causes the oxidation of the exhaust valves.

18. VEHICLE STORAGE

When you have to store the vehicle for a long period of time you should:

- Clean the vehicle thoroughly and allow it to dry.
- Treat all bright or zinc-coated parts with wax-based corrosion inhibitors, except for the brake discs, which are made of stainless steel and do not need protection.
- Start the engine for about 5 minutes to warm up the engine oil and then drain it (see maintenance).
- Change the filters and add new engine oil.
- Check the condition and the level of the antifreeze.
- Drain the fuel from the tank (if left for a long time, the fuel deteriorates).
- Check the tyre pressure and inflate them to their maximum pressure of 2 bars.
- Disconnect the battery.
- Cover the vehicle to protect it from dust and dirt.
- Store the vehicle in a dry place that is not exposed to significant fluctuations in temperature.



To turn on the vehicle again, after storage:

- Connect the battery (having charged it previously).
- Replace the fuel filter.
- Fill the fuel tank.
- Check the points in the section “Daily inspection before driving”.
- Perform a brief test drive.

MAINTENANCE

* Equipment available depending on version.
We reserve the right to modify the product and the design.

19. SAFETY AND MAINTENANCE STANDARDS



- Were it to be necessary to keep the engine running to service the vehicle, make sure that the work area is well ventilated and, if necessary, use suitable air extractors; never run an engine in enclosed areas; **NEVER** leave the engine running in enclosed areas. The exhaust gases that are produced are toxic.
- The battery electrolyte contains sulphuric acid. Protect your eyes, clothing and skin. Sulphuric acid is highly corrosive; if it comes into contact with eyes or skin, wash with plenty of water and see a doctor immediately.
- Batteries produce hydrogen, a gas that can be highly explosive. Do not smoke and avoid open flames or sparks near to the battery, especially when you are charging it.
- Fuel is extremely flammable and can explode under certain conditions. Do not smoke and do not allow any open flames or sparks in the work area.
- Clean the brake pads in a ventilated place, directing the jet of compressed air in such a way that you do not breathe in the dust produced by the wear and tear of the friction material. Although such dust does not contain asbestos, inhalation is nevertheless harmful. Using a mask and protective goggles is recommended.



- Use original CORVUS spare parts and lubricants recommended by CORVUS. Non-original or non-compliant spare parts can damage the vehicle.
- Only use tools designed specifically for this vehicle.
- Always use new gaskets, sealing rings and pins during assembly.
- After disassembly, clean the components with non-flammable solvent or one with a low flammability point. Lubricate all working surfaces before assembly, excluding the conical couplings.
- After assembly, check that all components have been installed correctly and that they work perfectly.
- For disassembly, inspection and assembly operations, only use tools with metric measurements. Metric screws, nuts and bolts are not interchangeable with connecting parts with English measurements. The use of unsuitable tools and connecting parts may damage your vehicle.

20. SERVICE CHART

The maintenance requirements set out in this chart are simple and necessary to ensure the proper maintenance of your vehicle.

A: ADJUST / C: CHECK / L: LUBRICATE / R: REPLACE

ELEMENT		Daily	Interval					
			50 h	200 h	500 h	1000 h	1500 h	2000 h
Cooling	Check and refill coolant	C						
	Check and clean radiator fins			C				
	Check and adjust cooling belt		C (3)	C (4)				
	Drain, clean and refill system with new coolant					R (5)		
Cylinder Head	Adjust intake/exhaust valve settings					A		
	Secure intake/exhaust valves (if necessary)							A
Electrical equip	Check indicators	C						
	Check battery			C				
Engine oil	Check engine oil level	C						
	Replace engine oil			R (3)	R (4)			
	Replace engine oil filter			R (3)	R (4)			
Emission control	Inspect, clean and check fuel injectors (if necessary)						A	
	Inspect the crankcase breather system						A	
Fuel	Check and fill the fuel tank	C						
	Drain the fuel tank				C			
	Drain fuel filter water separator			C				
	Check fuel filter water separator	C						
	Clean fuel filter water separator (2)					C		
Sleeves	Replace fuel system and cooling sleeves							R (6)
	Clean or replace air filter element (1) (2)				C	R		

(1) Perform more often if the vehicle is used intensively, in areas with a lot of dust, sand, snow, wet or muddy conditions. (2): Replace if necessary. (3): The first time. (4): 2nd time and from then on. (5): Or 1 year, whichever comes first. (6): Or 2 years, whichever comes first.

20. SERVICE CHART

The maintenance requirements set out in this chart are simple and necessary to ensure the proper maintenance of your vehicle.

A: ADJUST / C: CHECK / L: LUBRICATE / R: REPLACE

ELEMENT		Daily	Interval					
			50 h	200 h	500 h	1000 h	1500 h	2000 h
Engine (complete)	General visual engine check	C						
CVT	CVT transmission belt (1) (2)		C (3)	C (4)				
	Sliding elements (1) (2)				C			
	CVT air intake and outlet			C				
Gearbox, differentials and transmissions	Check gearshift and front/rear differential oil level			C				
	Replace oil in 4WD gearbox and front differential/actuator		R (3)	R (4)				
	Check transmission joint boots	C						
	Cardan gaskets	L						
Wheels and shock absorbers	Wheel bearings		C					
	Nuts and studs of the wheel bolts		C					
	Suspension ball joints and attachment points		C					
	Tyre pressure and wear	C						
General check	Absence of leaks and state of seals (1)		C					R (6)
	Check brake fluid level		C					
	Replace brake fluid							R (6)
	Lubricate the stub shafts, cardan gaskets and ball joints			L				
	Check and clean underbody protection.	C						
	Check condition of discs and pads.	C						

(1) Perform more often if the vehicle is used intensively, in areas with a lot of dust, sand, snow, wet or muddy conditions. (2): Replace if necessary. (3): The first time. (4): 2nd time and from then on. (5): Or 1 year, whichever comes first. (6): Or 2 years, whichever comes first.

21. RAISING THE VEHICLE

The vehicle is equipped with an area at the front (1) and another at the rear (2) to facilitate its elevation.




Before raising the vehicle, make sure the brake is fully on and that the surface is flat and completely horizontal.



Do not perform any operation or service while the vehicle is being lifted. Do not touch the vehicle or get into it until it is fully raised and secured, as this could destabilise the vehicle and cause it to overturn.


1. Chock the wheels on the axle opposite the one being serviced to prevent the vehicle from moving during the process.
2. Mark out the work area and keep it clear of other people.
3. Place the base of the lift in the area shown on the vehicle.
4. Raise the vehicle slowly, checking that it is stable.
5. After raising the vehicle with the lift, never place any part of your body under the vehicle without first securing it properly.

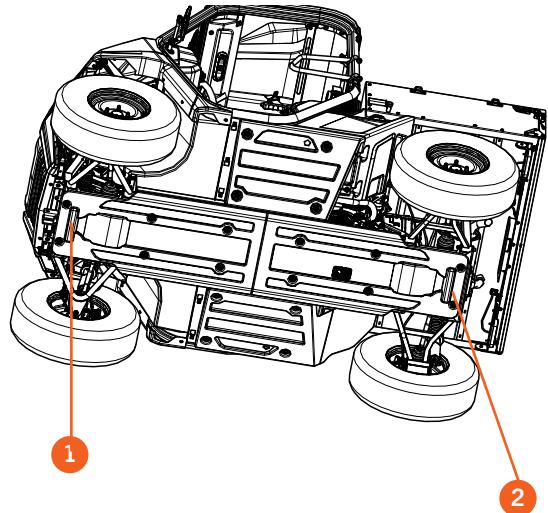

22. UNDERBODY PROTECTOR

Disassembly:

1. Unscrew the 6 screws from the front underbody protector (1).
2. Uncouple the protector.
3. Unscrew the 6 screws from the rear underbody protector (2).
4. Uncouple the protector.
5. Unscrew the 4 screws from the right-hand underbody protector (3).
6. Uncouple the protector.
7. Unscrew the 4 screws from the left-hand underbody protector (4).
8. Uncouple the protector.

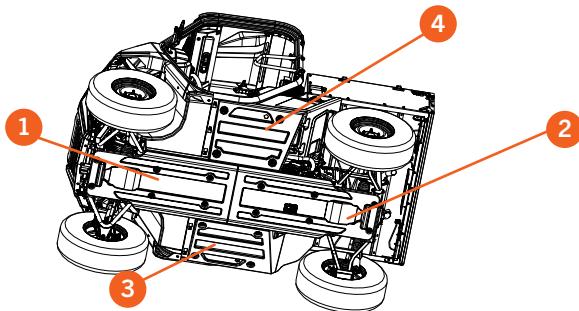

! Do not drive without the underbody protector, as this could jeopardise the integrity of important components such as the transmission.

! The underbody protector must be kept clean, both internally and externally. In order to be able to detect fluid leaks from the vehicle, avoid rust due to trapped water, etc.

23. WHEELS


Disassembly:

1. Put the vehicle in a horizontal position.
2. Engage the parking brake.
3. Loosen the four screws on the wheel being removed.
4. Raise the area of the vehicle (front or rear) where the wheel you are removing is located (see page 48).
5. Unscrew the four screws (5) holding the wheel rim.
6. Remove the wheel.

Perform the above process in reverse for the installation.

! NEVER drive without one of the wheel bolts, as this poses a great risk to your safety.

 **TECHNICAL INFORMATION** Fastening torque for wheel nuts: 70 Nm.

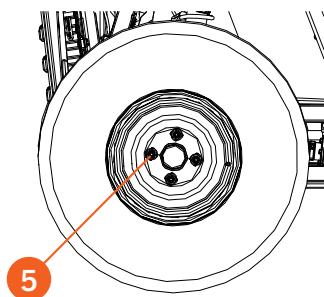

24. AIR FILTER (CLEANING THE AIR FILTER)

When cleaning the air filter, take care to make sure it does not become obstructed and that no dirt gets into the engine, especially when using the vehicle in dusty areas. Without fail, inspect the air filter before and after each use, as indicated in the Service Chart (see page 46/47).

Procedure:

1. Release the latches (1) that hold the air filter cover.
2. Remove the air filter cartridge (2).
3. Clean with compressed air, from the inside toward the outside.
4. Clean the inside of the air filter housing with a damp cloth.
5. Replace the air filter cartridge if it is very dirty, wet or damaged.

Recommendation:

Do not apply excessive air pressure, to avoid tearing the air filter paper which could result in severe engine damage. Recommended air pressure between 42 - 71 PSI / 0.29 - 0.49 MPA / 3 - 5 KGF/cm².

 These operations must be carried out with the appropriate precautions, using a mask and safety goggles.

 A clogged air filter allows dirt into the engine, causing excessive wear and damaging it.


A clogged or damaged air filter can cause severe engine damage.

Regulations oblige garages to collect and store, without mixing, hazardous or toxic waste, contaminated waste and inert non-hazardous waste. Such waste may not be dumped and instead must be processed by accredited waste management companies.



TECHNICAL INFORMATION:

Recommended air pressure between 42-71 PSI / 0.29-0.49 MPA / 3-5 KGF/cm². Air filter cartridge: 02170060003

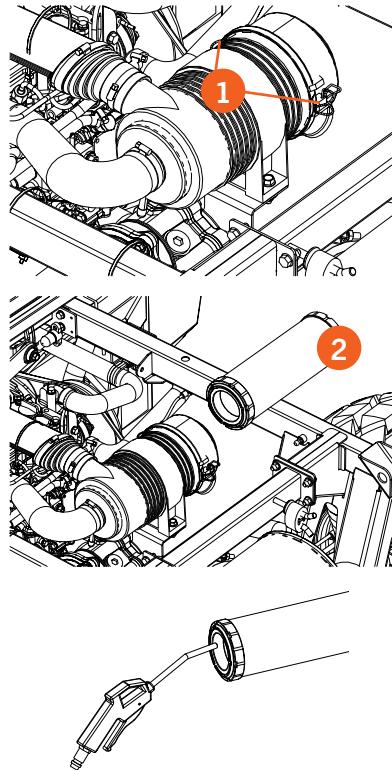

25. ENGINE OIL (LEVEL CHECK)

The smooth operation and durability of the transmission and engine essentially depend on the oil being kept at the optimum level and being changed regularly, as indicated in the Service Chart (see page 46/47).

Procedure:

1. Put the vehicle in a horizontal position.
2. Run the engine so that once the oil is warm it can make any sediment rise up. Then turn it off after a few minutes.
3. Check the oil level using the plug/dipstick (1).
 - 3.1. Remove the plug/dipstick (1) and clean the dipstick with a clean cloth.
 - 3.2. Put it in again to smear it in oil.
 - 3.3. Remove the plug/dipstick (1) again and check the oil level on it.
 - 3.4. Put the plug/dipstick (1) in again.
4. The oil level should be between the maximum and minimum marks (2) of the plug/dipstick.
- 5. If the oil level is too high:**
 - 5.1. Place a container under the engine to collect the used oil and avoid any spillage.
 - 5.2. Remove the excess using the drain plug/screw (4).
 - 5.3. Tighten the plug/screw (4), replacing its washer.
- 6. If the oil level is too low:**
 - 6.1. Top it up with the required amount of oil, removing either of the two filler plugs (3).
 - 6.2. Make sure you tighten these plugs afterwards (3), maintaining their O-rings.
7. Run the engine for a few minutes.
8. Stop the engine and after about 5 minutes, check the oil level again.





When filling the tank by adding new oil, you must use the same type of oil already in the engine.

Perform several checks during refilling, avoiding exceeding the maximum level.



TECHNICAL INFORMATION: Recommended oil: SAE 15W40 - API CD, CF, CF-4 and CI-4 / ACEA E-5. Capacity: 1.55 L.

Tighten the drain plug/screw to 58 Nm.

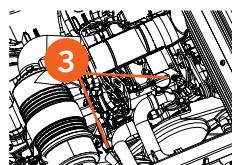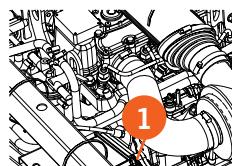

25. ENGINE OIL (OIL AND FILTER CHANGE)

You should keep the oil at the optimum level and change it regularly, as indicated in the Service Chart (see page 46/47).

Procedure:

1. Put the vehicle in a horizontal position.
2. Run the engine so that once the oil is warm it can make any sediment rise up. Then turn it off after a few minutes.
3. Place a container under the engine to collect the used oil and avoid any spillage.
4. Remove the plug/dipstick (1) and the two filler plugs (2), to make it easier to drain the oil.
5. Remove the drain plug/screw (3) and wait until all the content has drained out.
6. Remove the filter (4) and discard.
7. Put the new filter in place, lubricate the O-ring seal and tighten manually, without using any tools.
8. Tighten the plug/screw (3), replacing its washer.
9. Fill with new oil.
10. Ensure the tightness of the cap/dipstick level (1) and the filler caps (2), with their O-ring.
11. Run the engine for a few minutes.
12. Stop the engine and after about 5 minutes, check the oil level again, according to the indications of the oil level check.



TECHNICAL INFORMATION:


Recommended oil: SAE 15W40 - API CD, CF, CF-4 and CI-4 / ACEA E-5. Capacity: 1.55 L.
Tighten the drain plug/screw to 58 Nm.
Air filter cartridge: 0299000052.
Washer 16: 0299000217.



For the transmission and engine to function properly, keep the oil at the optimum level and change it periodically, as indicated in the service chart (see page 46/47).

Insufficient, degraded or contaminated oil can accelerate the wear and tear of a vehicle and cause serious engine damage.

Regulations oblige garages to collect and store, without mixing, hazardous or toxic waste, contaminated waste and inert non-hazardous waste. Such waste may not be dumped and must rather be processed by accredited managers.

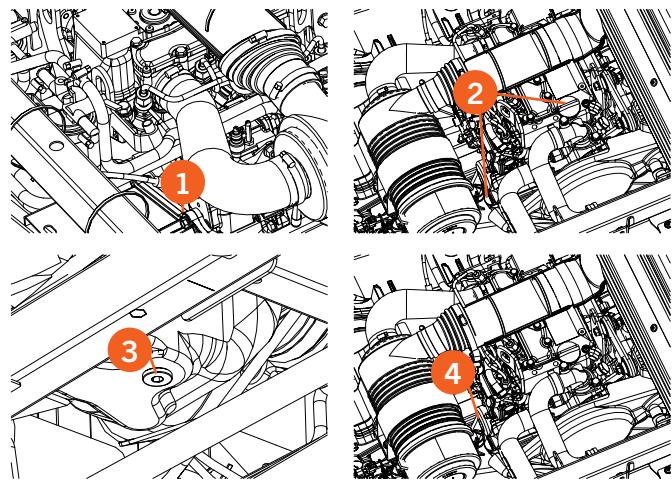

25. ENGINE OIL (OIL AND FILTER CHANGE)


WATER PRE-FILTER

The water pre-filter (1) is behind the vehicle's left-hand mudguard, so this must be removed to gain access to it.

Check the pre-filter regularly; if it is worn or has lost efficiency, or if the hours of use indicated in the service chart have been exceeded, replace the pre-filter with a new one at your CORVUS service centre.



A worn water pre-filter can accelerate engine wear and eventually break the engine. NEVER start the engine without the pre-filter.

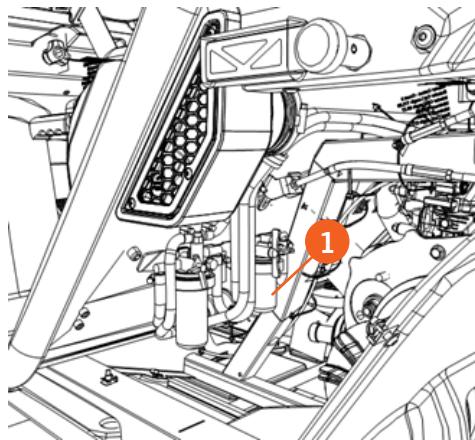


FUEL FILTER

The fuel filter (2) is behind the vehicle's left-hand mudguard, so this must be removed to gain access to it.

Check the filter regularly; if it is worn or has lost efficiency, or if the hours of use indicated in the service chart have been exceeded, replace the filter with a new one at your CORVUS service centre.



A worn fuel filter can accelerate engine wear and eventually break the engine. NEVER start the engine without the fuel filter.

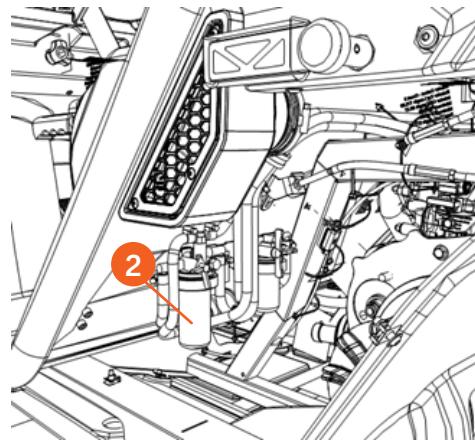


25. ENGINE OIL (OIL AND FILTER CHANGE)

TRANSMISSION OIL (LEVEL CHECK)

The smooth operation and durability of the transmission and engine essentially depend on the oil being kept at the optimum level and being changed regularly, as indicated in the Service Chart (see page 46/47).

Checking procedure:

1. Put the vehicle in a horizontal position.
2. Remove the level screw (1).
3. If a slight amount of oil oozes from the hole, the level will be correct. If, on the contrary, no liquid oozes from the hole, you should continue to add more oil.
4. If you need to add more oil, you must do so through the filler cap (2).
5. Check for leaks and dispose of used liquid properly.

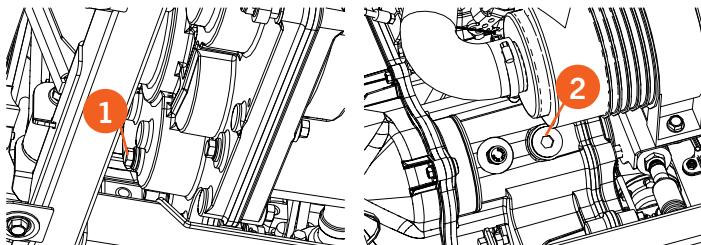

GEARBOX OIL (OIL CHANGE)

Change procedure:

1. Put the vehicle in horizontal position and lift the load box.
2. Remove the rear underbody protector.
3. Place a container under the transmission to collect the used oil and avoid any spillage.
4. Remove the filler plug (2), to facilitate a better drainage of the transmission oil.
5. Remove the transmission oil drain screw (3).
6. Once all the oil has drained from the transmission, replace the washer and make sure the drain screw is tightened to 24 Nm.
7. Fill the transmission with new oil.
8. Replace the O-ring and attach the filler cap (1).
9. Check for leaks and dispose of used liquid properly.




TECHNICAL INFORMATION:

Recommended oil: SAE 80W-90, API GL5.
Capacity: 1.7 L.



NEVER drive the vehicle if there is no oil in the gearbox or if the oil level is low. It is important that you are aware of the maintenance intervals for the components as shown in the Service Chart.

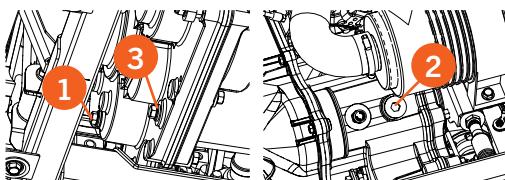

26. FRONT DIFFERENTIAL OIL (CHECK AND CHANGE)

CHECKING THE OIL:

To check the front differential oil level, drain the oil into a calibrated container and measure the amount that has been extracted. The correct volume is 0.5 L.

CHANGING THE OIL:

The oil must be changed regularly, to ensure the long service life of the differential, as indicated in the Service Chart (see page 46/47).

1. Park the vehicle in a totally horizontal position.
2. Remove the front underbody protection and the inside of the hood (if fitted) before starting the operation (see page 49).
3. Place a container under the differential to collect the used oil and avoid any spillage.
4. Unscrew the filler plug/screw (1), to facilitate better oil drainage.
5. Unscrew the drain plug/screw (2) and wait until all the content has drained out.
6. Screw on the drain plug/screw (2) and tighten the drain plug, replacing the washer, securing it at 24 Nm.
7. Fill the front differential with the new oil.
8. Screw on and make sure the corresponding filler plug/screw (1) is tight, replacing its washer, securing it at 24 Nm.
9. Check that there are no leaks and that the seals are in a good condition and dispose of used liquid properly.



TECHNICAL INFORMATION:


Recommended oil: SAE 80W-90, API GL5.

Capacity: 0.5 L.



NEVER drive the vehicle if there is no oil in the front differential or if the oil level is low.

It is important that you are aware of the maintenance intervals for the components as shown in the Service Chart.

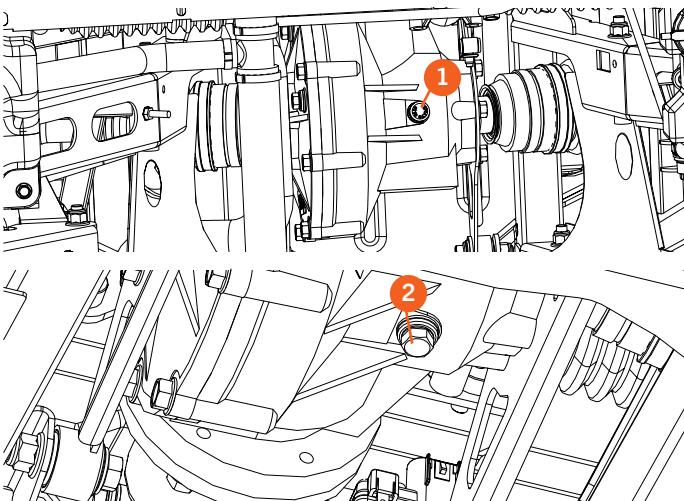

* Equipment available depending on version.
We reserve the right to modify the product and the design.

27. 4WD LOCKING SYSTEM OIL (CHECK AND CHANGE)

CHECKING THE OIL:

To check the 4WD lock system oil level, you have to drain the oil into a calibrated container and measure the amount that has been extracted. The correct volume is 0.05 L.

CHANGING THE OIL:

It is convenient to frequently check that there are no leaks and the maintenance of the oil level, for correct operation.

Changing the locking system oil.

1. Put the vehicle in the horizontal position and remove the front underbody protector (see page 49).
2. Place a container under the 4WD locking system to collect the used oil and avoid any spillage.
3. Remove the filler plug (1) to facilitate better drainage of the 4WD locking system oil.
4. Unscrew the 4WD locking system oil drain screw (2).
5. Once all the oil has drained out of the system, replace the washer and make sure the drain screw is tightened to 24 Nm.
6. Fill with 0.05 L of new oil.
7. Replace the plug's washer and tighten the oil filler plug (1) to 24 Nm.
8. Check for leaks and dispose of used liquid properly.



TECHNICAL INFORMATION:

Recommended oil: SAE 80W-90, API GL5. Capacity: 0.05 L.


Tighten the filler plug/screw to 24 Nm.

Tighten the drain plug/screw to 24 Nm.



NEVER drive the vehicle if there is no oil in the 4WD actuator or if the oil level is low.

It is important that you are aware of the maintenance intervals for the components as shown in the Service Chart.

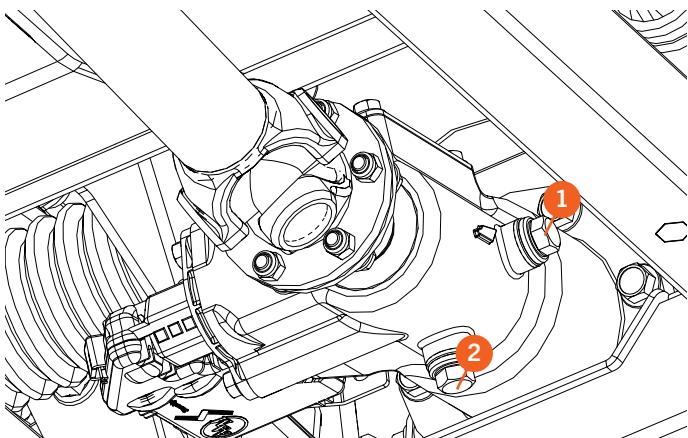

28. GREASE NIPPLES


Your vehicle is equipped with grease nipples to facilitate the lubrication of the stub shafts on the rear wheels.

1- Stub shaft grease nipple (1).



To prevent rapid wear of the components, the specified points must be lubricated as described in the Service Chart.

Regularly check to make sure that the grease nipple is still in position. If it falls out, lubrication may be lost and dust or foreign matter may enter, which will accelerate the wear of the components.

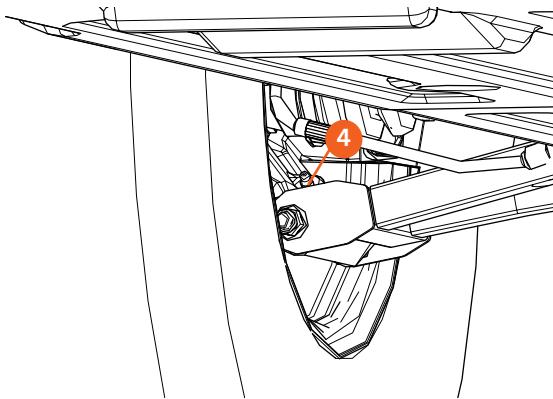


29. LIGHTING

PILOT LIGHTS

The headlamps and the indicator lamps are located on the **front** of the vehicle:


1. The front low beam headlamps (short) have a screw so you can adjust their height.
2. The front long beam headlamps have screws so you can adjust their height.
3. Front indicator lamps.

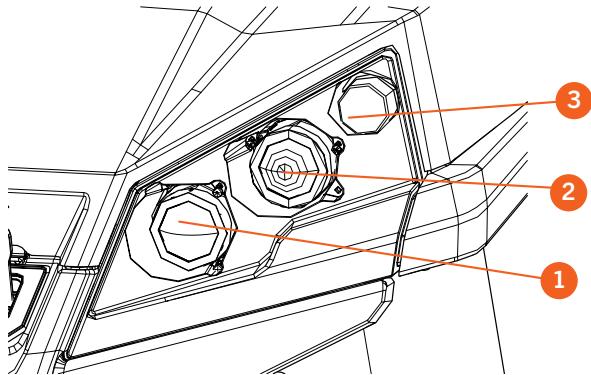

The brake lights/sidelights, indicator lamps and reflectors are located on the **rear** of the vehicle:

4. Reflectors
5. Rear brake and sidelights.

6. Your vehicle also has a number plate light (see page 61).

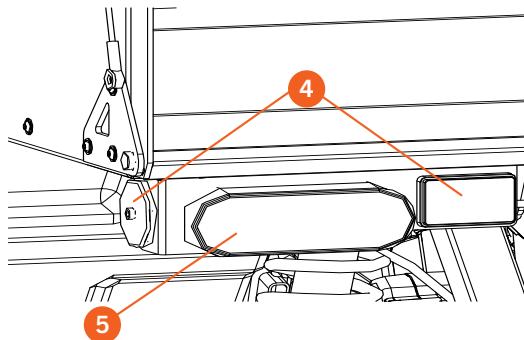

 The surface of the lamps may be very hot.

NEVER drive the vehicle without lights or indicator lamps.

They are an important safety feature.


29. LIGHTING

ADJUSTING THE HEIGHT

1. Position the vehicle 10 meters from a wall and use the parking brake to immobilise it.
2. Use the screws to adjust the headlamps (1).
3. The light beam must be 30 cm below the horizontal line projected onto the wall from the centre of the lamp.



The bulbs and lamps may be very hot.

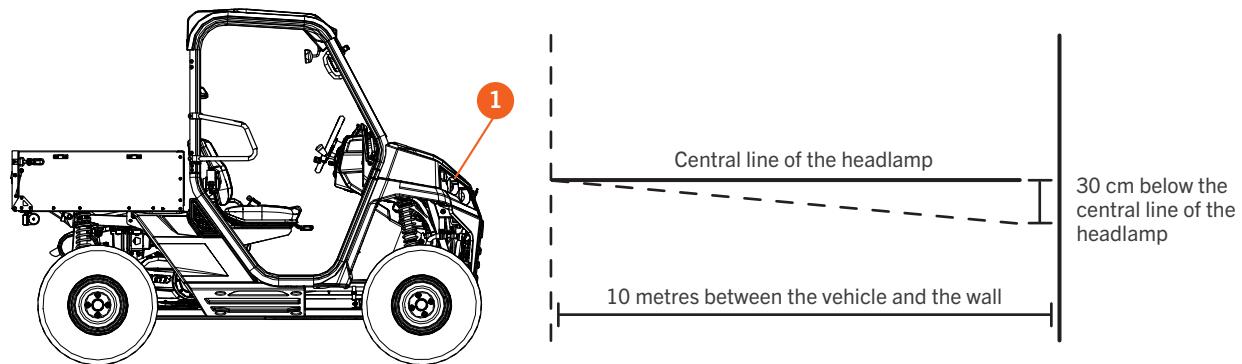

30. FRONT LAMPS (LOW AND HIGH BEAM AND INDICATOR LAMPS)



The bulbs and lamps may be very hot.

Procedure:

1. Switch the vehicle off.
2. Open the front hood.

Replacing a low beam lamp:

1. Unplug the electrical connector (1) of the lamp you are replacing.
2. Turn the bulb counterclockwise to remove it from its housing.

Replacing the long-range lights:


1. Unplug the electrical connector (2) of the lamp you are replacing.
2. Turn the bulb counterclockwise to remove it from its housing.

Replacing the sidelights:

1. Unplug the electrical connector (3) of the lamp you are replacing.
2. Insert your hand beneath the high beam lamp until you touch the light.
3. Turn the bulb counterclockwise to remove it from its housing.

Replacing the indicator lamps:

1. To replace the indicator lamps, turn the bulb holder bushing (4) counterclockwise to disconnect it from its housing.
2. Turn the lamp and separate it from the bushing.

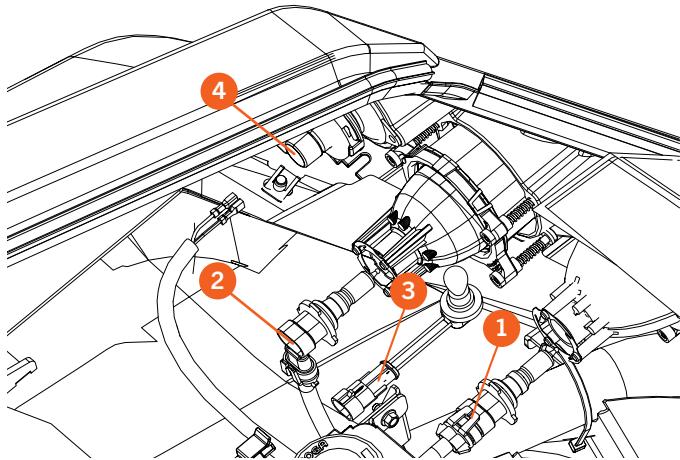

TECHNICAL INFORMATION



Dipped beam lamp: HB3A 12V 60W // Ref. 09180040003

High beam lamp: HB3 12V 60W // Ref. 08011460000

Position lamp: W5W 12V 5W // Ref: 08011360000

Indicator lamp 12V 21W //Ref. 08000960000



Do not drive the vehicle without brake lights, indicator lamps or sidelights as these are important safety features.


31. NUMBER PLATE LIGHT BULB

To access the number plate light bulbs, carry out the following steps:

1. Use a flat-head screwdriver to remove the cover (1).
2. Then remove the transparent cover (1).
3. Remove the bulb carefully.

TECHNICAL INFORMATION

Number plate light bulb: Ref. 08011360000

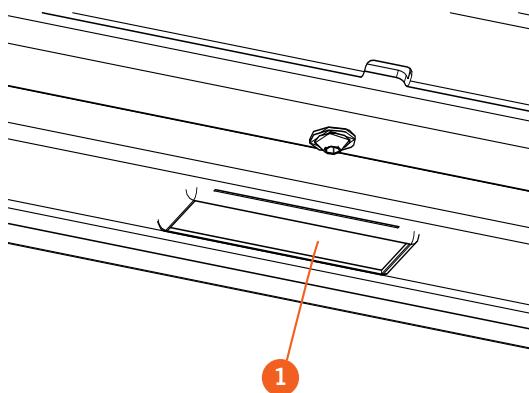


32. TYRES

Check that the tyres are not worn, cracked or damaged.

Also check that they are at the correct pressure.

Recommended front/rear pressure:

- 1.0 bar (empty vehicle)
- 1.5 bar (vehicle at full load)

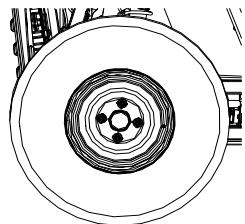

Incorrect tyre maintenance may lead to a loss of control of the vehicle and an accident, which may result in serious injury or even death.

Maintain the recommended tyre pressure. Check the pressure before driving. Bear in mind that, even after driving your vehicle for a short distance, the tyre pressure reading may already be higher. Only use the size and type of tyre specific to this vehicle.

Do not use your vehicle with worn or damaged tyres; replace them. Always follow your tyre manufacturer's maintenance instructions.

33. BOLTS, NUTS AND FASTENINGS

Every day before you drive your vehicle you should check that all the nuts and bolts are tight.

You should also check that the other fastenings are in place and in good condition.

! NEVER drive with nuts or bolts removed, this could cause an accident or serious damage.

34. BRAKE WEAR

If the thickness of any of the front or rear disc brake pads is less than 1.5 mm, completely change the set of affected pads.

! Check that the thickness of the front and rear discs is at least 3.5 mm.

It is important to keep the area around the discs, pads and wheel spindles clean. Do not allow mud or external elements to accumulate over long periods of time. These elements can affect the performance, effectiveness and life of the materials.

! We recommend that you go to your CORVUS dealer to change the brake pads. They will also check for any possible wear of the brake discs.

35. BRAKE FLUID

Inspect the brake fluid and change it regularly.

You must also change it if it is contaminated by water or dirt.

Recommended fluid: DOT-4 brake fluid.


! Do not mix different types of brake fluid. The fluid used to fill or refill your circuit must comply with the standard specified on the fluid reservoir for each circuit. You should NEVER change the specification, always respect the dot-4 specification. What is important is not that the brake fluid should be the same brand, rather that it MUST HAVE the same specification. NEVER use fluid from a container that is not sealed (unopened) at source. NEVER use brake fluid that has already been used.

Do not spill brake fluid on paintwork.

The brake fluid level must be within the MIN/MAX range. If there is not enough liquid, it should be added.

! Check that there is no loss of liquid through the gaskets. Check for possible damage to the brake sleeves.

It is recommended that you replace the brake fluid every 2 years.

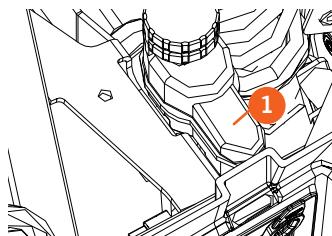

36. COOLANT

The coolant absorbs excess heat from the engine and transfers it to the air through the radiator. If the fluid level decreases, the engine overheats and can be severely damaged.

Check the fluid level every day before driving your CORVUS. At the same time, check for foreign matter, any unusual or strange colouring or other contaminating fluids such as oil. To protect the aluminium parts within the cooling system (the engine and the radiator) from oxidation and corrosion, use chemical inhibitors in the coolant essence. If an anti-corrosive liquid is not used, the radiator will begin to rust after a while. This would obstruct the cooling pipes.

NOTE: Coolant type 50% long life -35°C.

⚠ Liquid chemicals are harmful to the human body. Follow the manufacturer's instructions.

! The use of incorrect liquid solutions may cause damage to the engine and the cooling system. Use coolant with a specific corrosion inhibitor for aluminium engines and radiators in accordance with the manufacturer's instructions. If the coolant level is correct and the vehicle continues to heat up, even if it has only been running for a few minutes, this may be the result of bubbles in the circuit and it will need to be purged. If the high temperature persists, contact your nearest CORVUS service centre.

⚠ To avoid burns do not remove the radiator cap or try to change the fluid when the engine is still hot. Wait until it cools down.

Coolant level:

1. Place the vehicle in a completely horizontal position.
2. Unscrew the cap from the tank (1) in a counterclockwise direction and wait for a few seconds until the vapours disperse.
3. Check the coolant level. The liquid must not exceed the line marked (MAX).
4. If the fluid level is low, add the required amount through the filling aperture.


Recommended fluid: 50% Long time. (-35°C).

⚠ If liquid falls onto the tyres, it makes them more slippery and can cause an accident. Immediately clean any liquid that may fall on the chassis, engine or wheels.

Inspect any old liquid. If you notice white patches in the liquid, it means that the aluminium parts of the cooling system are corroded. If the liquid is brown it means that the steel or iron parts of the system are oxidised.

In both cases, clean the system.

! Replace the gaskets with new ones. Check for any potential damage, leaks or lack of gaskets in the cooling system. In countries with cold weather you should adjust the antifreeze capacity to your minimum temperature, adding a margin of -5°C.

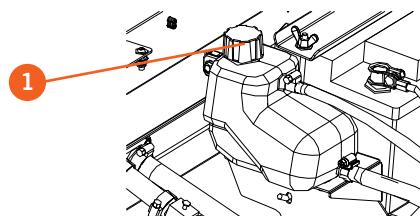

* Equipment available depending on version.
We reserve the right to modify the product and the design.

37. RADIATOR HOSE

Hosepipes:

Check that the radiator hosepipes do not have cuts or are damaged and that the connections do not have leaks.


Radiator:

Check that the radiator fins are not obstructed (insects or mud). Clean any such obstructions with a jet of water at low pressure.



Using high pressure water can damage the radiator fins and diminish the effectiveness. Do not obstruct or divert the air inlet to the radiator by installing any unauthorised accessories. Interfering with the radiator may cause it to overheat and damage the engine.

Replace the radiator if it is damaged or has lost effectiveness.

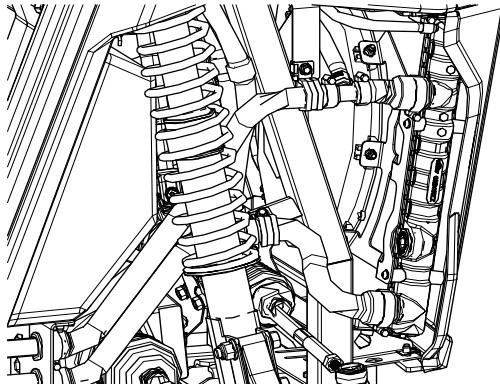

38. AUXILIARY BATTERY

The battery (12 V and 55 Ah) does not need maintenance.


Changing the battery

The battery is located at the right rear of the vehicle, under the right-hand spray shield or right-hand side box.

To change it, perform the following steps:

1. Open the hood by releasing the two rubber latches.
2. Remove the locking nuts (1) securing the battery.
3. Loosen the battery terminals and remove the battery, first the negative terminal (A) and then the positive terminal (B).

Replace the battery with a new one and follow the steps in reverse order to reassemble it.

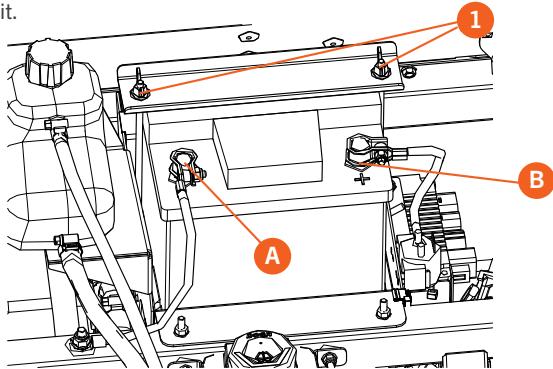

Do not handle or try to open the battery: the electrolyte and gases are toxic and can cause serious injury. Keep the battery out of the reach of children. Keep the battery away from sources of heat, open flames and sparks. Always store and charge the battery in well-ventilated areas. Use protective clothing and goggles.


Always disconnect the negative terminal first and connect it last.

39. FUSES

If the engine stops unexpectedly and/or fails to start, or if there is another type of electrical fault, it may be necessary to replace a fuse. Find and fix any short circuits that may have caused the fuse to blow, and replace it.


To access the fuse box, you need to open the front hood and remove the cover shown (1).

After that, you need to remove the fuse holder cover (2).

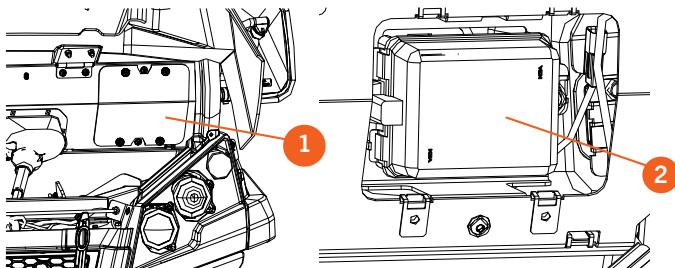

! NEVER use fuses other than those indicated, as this could lead to malfunction or failure of the electrical system.

DX4s - TOP//SUPERIOR

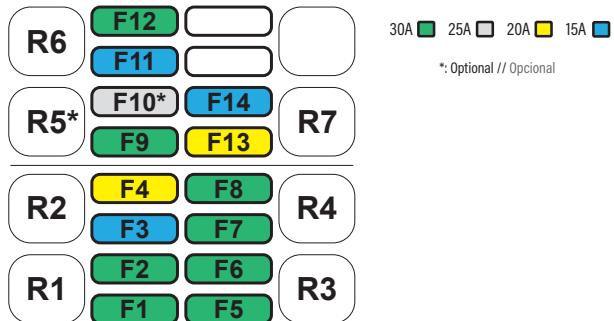

F1 - Key switch // Llave de contacto
F2 - Electric fan // Electroventilador
F3 - USB // USB
F4 - Signal // Señal
F5 - Glow plugs // Calentadores
F6 - Stop relay + lamp // Relé de Paro + Lámpara
F7 - Power control // Control de Potencia
F8 - EPS // EPS (Dirección asistida eléctrica)
F9 - Safety Relay // Relé de Seguridad
*F10 - Heater // Calefacción
F11 - Trailer Supply // Alimentación de remolque
F12 - Low light+brake // Luces de cruce + freno
F13 - Signal KL30 // Señal KL30
F14 - GPS // GPS


R1 - Electric fan // Electroventilador
R2 - USB + Signal // USB + Señal
R3 - Stop relay + lamp // Relé de Paro + Luces
R4 - Power Control // Control de Potencia
*R5 - Heater // Calefacción
R6 - Lamps // Luces
R7 - Start Relay // Relé de Arranque

40. AUXILIARY POWER OUTPUTS

The vehicle has 3 free auxiliary connectors and a direct battery positive whose maximum individual load capacity is 150 W at 12 V. To avoid problems in the electrical system or battery, never exceed this capacity.

These connectors are located:

- (1) Behind the button panel in the middle of the dashboard (direct battery positive).
- (2) Behind the upper roof button panel (positive after contact).
- (3) On the left rear of the vehicle (positive after contact).

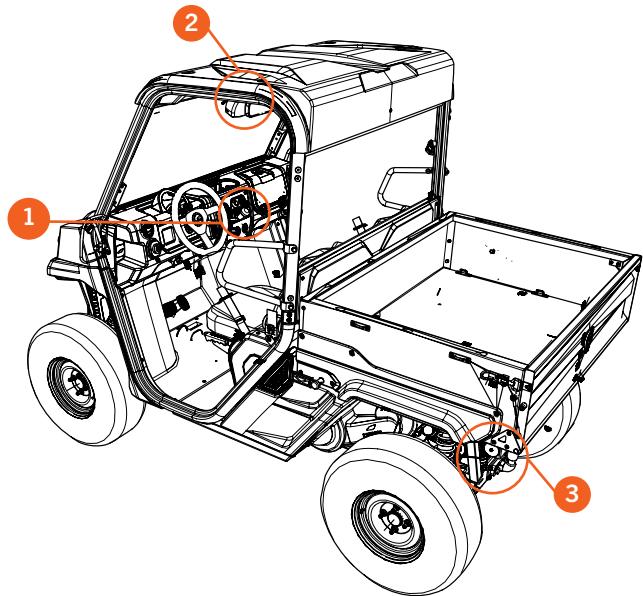

41. WINDSCREEN WIPERS


WINDSHIELD WIPER BLADE *

To remove the windshield wiper blade:

- 1 - Separate the windshield wiper arm.
The arm and the blade must form an angle of 90°.
- 2 - Press the central clip.
- 3 - Remove the blade downwards.

To assemble the blade:


- 1 - Place the windshield wiper arm between the blade.
- 2 - Place the tip of the arm onto the central clip.
- 3 - Twist the blade and return the arm to its initial position.

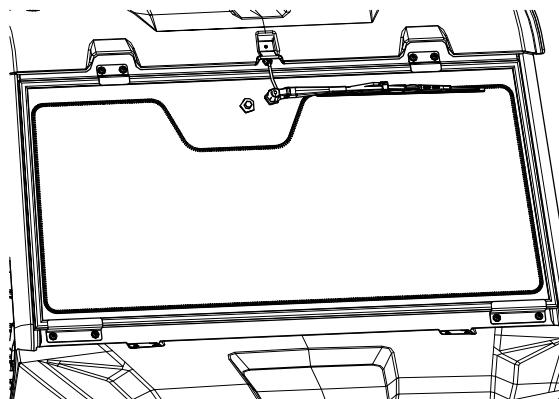

WINDSHIELD CLEANER FLUID *

The windscreen wiper fluid reservoir is located under the front hood.

- 1 - Put the vehicle in a horizontal position.
- 2 - Open the hood.
- 3 - Remove the cap.
- 4 - Fill the tank with fluid up to the top.
- 5 - Screw the cap back on.
- 6 - Check it works properly.

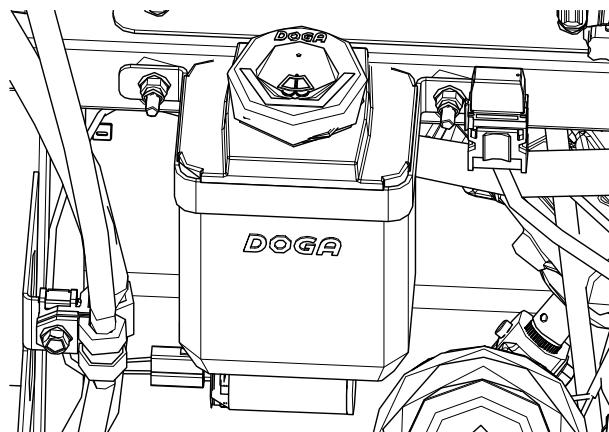

PRODUCT LIABILITY

WARRANTY
MANUAL



SUPPLEMENT SUBJECT TO PRODUCT LIABILITY DIRECTIVE 1999/34/CE OF 10/05/1999

1. The User Manual has been delivered to the customer or to his or her legal representative when they have taken delivery of the product. A contact person has been appointed to respond to queries.
2. The product has been presented to the client (legal representative) before it was handed over. The client (legal representative) has been informed that the product should be used only in accordance with the conditions laid down by the manufacturer (as described in the User Manual). The client (legal representative) fully understands the instructions.
3. The client (legal representative) has been informed that the manufacturer shall not be liable for problems resulting from any modification of the vehicle.
4. The client (legal representative) declares by their signature that they have been informed and that they understand the points set out above.

Date and signature of the client (legal representative).

WARRANTY MANUAL

WARRANTY
MANUAL



LIMITED WARRANTY

* Equipment available depending on version.
We reserve the right to modify the product and the design.

I. PRELIMINARY WARNINGS

(According to Royal Legislative Decree 1/2007, of 16 November, approving the revised text of the General Law for the Defence of Consumers and Users and other complementary laws.)

Rules regulating the warranty of the manufacturer **CORVUS INNOVA S.L.**, hereinafter "**CORVUS**".

The company **CORVUS**, hereby warrants to the end consumer, the purchaser of a vehicle manufactured by **CORVUS**, that both the materials and the manufacture are free from defects in accordance with the highest quality standards. Consequently, **CORVUS** hereby guarantees to the end purchaser (hereinafter, the "purchaser"), in accordance with the conditions expressed below, the repair of any material defect, hidden defect or manufacturing defect detected in a new vehicle, without charge, within the given warranty period and with a limitation of 1,000 operating hours.

2. WARRANTY PERIOD

The warranty term shall begin on the date on which the vehicle is delivered to the buyer by an authorised **CORVUS** dealer or official distributor, or in the case of demonstration models, on the date on which the vehicle begins operating for the first time. The seller shall be liable for any lack of conformity which might become manifest within the deadline set out in Royal Legislative Decree 1/2007, of 16 November, approving the revised text of the General Law for the Protection of Consumers and Users from the time of delivery and in accordance with Directive 1999/44/EC for the rest of the Member States of the European Community. For countries outside the European Community, the warranty period shall be governed by the rules in force therein. However, if the lack of conformity becomes apparent during the first six months from delivery of the vehicle, it is presumed that such failure already existed when it was handed over; from the sixth month, the buyer shall have to demonstrate that the lack of conformity existed at the time of delivery of the goods.

During the first six months after delivery of the repaired good, the seller shall be liable for the lack of conformity that led to the repair.

Any defect detected in the product must be brought to the attention of an official **CORVUS** distributor or authorised dealer within the warranty period. If the last day of the warranty period falls on a Sunday or an official holiday, the warranty period shall be extended in such a way that the last day of the warranty period is the first working day after the Sunday or the official holiday. Warranty claims for defects not brought to the attention of an official **CORVUS** distributor or authorised dealer before the end of the warranty period shall be excluded.

3. OBLIGATIONS OF THE BUYER

CORVUS shall be entitled to refuse warranty claims if and to the extent that:

1. The buyer has not submitted the vehicle to any of the inspections and/or maintenance work required in the owner's manual or has exceeded the date specified for such inspections or maintenance work. Defects appearing before the date specified for an inspection or maintenance work which has NEVER been carried out, or which was carried out after the specified date, are also excluded from the warranty.
2. If an inspection, maintenance or repair work has been carried out by third parties not recognised or authorised by CORVUS.
3. Any maintenance or repair work that has been carried out in violation of the technical requirements, specifications and instructions provided by the manufacturer.
4. Spare parts not authorised for use by CORVUS have been used when carrying out maintenance or repair work on the vehicle, or if and to the extent that the vehicle has been used, while using fossil fuels, lubricants or other liquids (including, among others, cleaning agents) that have not been expressly mentioned in the specifications of the User Manual.
5. The vehicle has been in any way altered or modified or equipped with components other than those that have been expressly authorised by CORVUS as approved vehicle components.
6. The vehicle has been stored or transported in a manner not consistent with the technical requirements.
7. The vehicle has been used for a special use different from ordinary use, such as a competition, racing or an attempt to obtain whatsoever record.
8. The vehicle has been involved in an accident that has directly or indirectly caused damage.

4. WARRANTY EXCLUSIONS

The following items will be excluded from the warranty:

1. Worn parts, including, without limitation, batteries, fuel filters, the oil filter element, air cleaners, brake discs, brake pads, clutch plates, CVT belts, CVT rollers, CVT variator, light bulbs, fuses, carbon brushes, tyres, cables and other rubber components, and in general any parts subject to wear and tear.
2. Lubricants (for example, oil, grease, etc.) and operating fluids (for example, battery fluid, coolant, etc.).
3. Inspection, adjustment and other maintenance work, as well as all types of cleaning work.
4. Paint damage and subsequent corrosion due to external influences, such as stones, salt, industrial exhaust gases and other environmental impacts or improper cleaning using unsuitable products.
5. Damage caused by defects, as well as expenditure incurred directly or indirectly as a result of the occurrence of defects (e.g. communication costs, accommodation costs, car rental costs, public transport costs, towing costs, express courier costs, etc.), as well as other financial damage (e.g. damage caused due to the loss of use of a vehicle, loss of income, loss of time, etc.).
6. An acoustic or aesthetic phenomenon that does not significantly affect the vehicle's condition of use (for example, small or hidden imperfections, noise or vibrations due to normal use, etc.).
7. Phenomena due to the ageing of the vehicle (for example, the discolouring of paintwork or metalwork).

5. VARIOUS

A. Were the repair of the defect or the replacement of the part to be disproportionate, CORVUS will have the prerogative to decide at its sole discretion whether to repair or replace defective parts. Ownership of replacement parts, if any, shall pass to CORVUS without further consideration. The official CORVUS distributor or authorised dealer to whom the repair of such defects has been entrusted shall not be authorised to make binding declarations on behalf of CORVUS.

B. In the event of doubt as to the existence of a defect or if a visual or material inspection is required, CORVUS reserves the right to demand the return of the parts covered by a warranty claim or to request an examination of the defect by a CORVUS expert. Any additional warranty obligations on parts replaced without charge or for any service provided free of charge under this warranty will be excluded. The warranty for spare parts within the warranty period shall end on the date of expiry of the warranty period of the product concerned.

C. If it were to prove impossible to repair a defect and the replacement thereof were to be disproportionate for the manufacturer, the consumer is guaranteed the right to cancel the contract (payment of compensation) or to a partial refund of the purchase price (discount), instead of the repair of the vehicle.

D. The buyer's warranty claims under the sale and purchase agreement entered into with the corresponding official distributor or authorised dealer shall not be affected by this warranty. This warranty shall not affect any additional contractual rights of the buyer under the general conditions of business of the authorised dealer. Such additional rights, however, can only be asserted against the authorised dealer or authorised distributor.

E. If the purchaser were to resell the product within the warranty period, the terms and conditions of this warranty shall continue to exist to the current extent, so that the rights to claim under this warranty in accordance with the terms and conditions regulated herein shall be transferred to the new owner of the vehicle.

NOTES

CHANGE OF OWNER

OWNER NO. 2

NAME AND SURNAME:

ADDRESS:

POSTCODE / TOWN:

PHONE:

MOBILE:

E-MAIL:

I confirm that I have received Proof of Delivery, the User Manual and two sets of keys. I have fully read and understood the User Manual. I know the maintenance intervals. I know the warranty conditions.

Date and signature of the customer (legal representative).

For your own safety (e.g. for any product recalls by the manufacturer), we recommend, as a new owner, that you inform an official **CORVUS** distributor or authorised dealer, or **CORVUS** itself directly, that you have purchased a **CORVUS** vehicle, so that your data can be registered in the service. This will ensure that you are duly notified of any recall that might affect you.

CHANGE OF OWNER

OWNER NO. 3

NAME AND SURNAME:

ADDRESS:

POSTCODE / TOWN:

PHONE:

MOBILE:

E-MAIL:

I confirm that I have received Proof of Delivery, the User Manual and two sets of keys. I have fully read and understood the User Manual. I know the maintenance intervals. I know the warranty conditions.

Date and signature of the customer (legal representative).

For your own safety (e.g. for any product recalls by the manufacturer), we recommend, as a new owner, that you inform an official **CORVUS** distributor or authorised dealer, or **CORVUS** itself directly, that you have purchased a **CORVUS** vehicle, so that your data can be registered in the service. This will ensure that you are duly notified of any recall that might affect you.

REVISION CONTROL

WARRANTY
MANUAL



REVISION CONTROL

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

REVISION CONTROL

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

REVISION CONTROL

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

REVISION CONTROL

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

Date: _____

Km: _____

Next revision: _____

Observations:

Stamp: _____

NOTES

* Equipment available depending on version.
We reserve the right to modify the product and the design.

CORVUS
MADE IN EUROPE 



WWW.CORVUS-UTV.COM